

Pioneer

Service Manual



XDJ-R1

ORDER NO.
RRV4401

DJ SYSTEM

XDJ-R1

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
XDJ-R1	SVWYXE8	AC 220 V to 240 V	
XDJ-R1	CUXE	AC 120 V	
XDJ-R1	FLWPWXE	AC 110 V to 120 V or 220 V to 240 V	
XDJ-R1	KXE5	AC 220 V	
XDJ-R1	AXE5	AC 220 V to 240 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2013


K-MZV JUNE 2013 Printed in Japan

7. DISASSEMBLY






Note:

- (1) Do NOT look directly into the pickup lens. The laser beam may cause eye injury.
- (2) Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

Knobs and Volumes Location

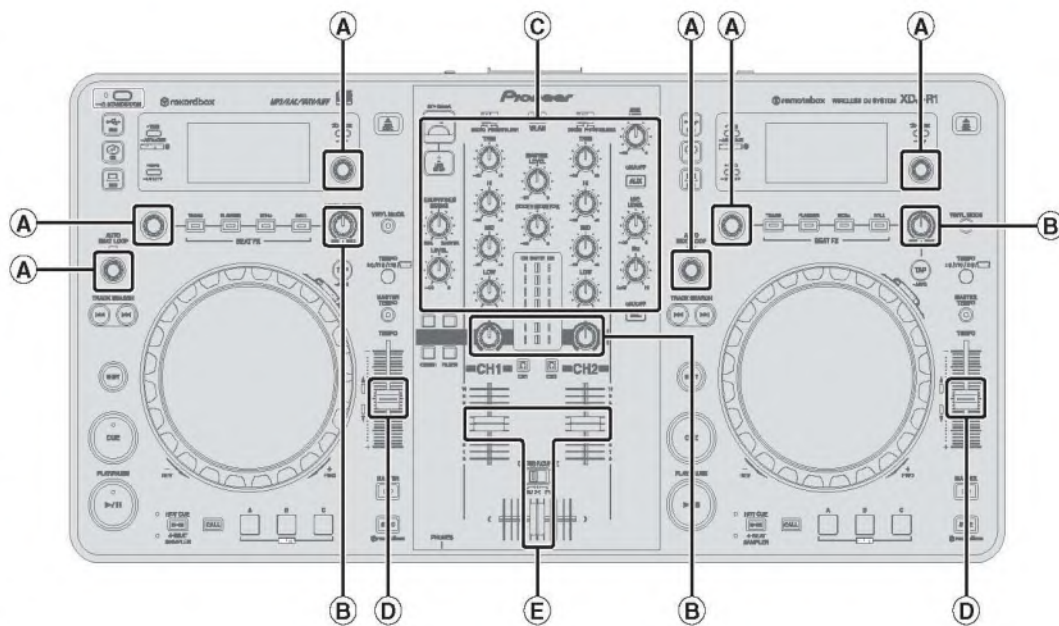

- | | | | | |
|-------------------------------|-----------------------------------|------------------------------------|---------------------------------|-------------------------------|
| A 100-COMBO-2962
x6 | B 100-DJM100-2826-HA
x4 | C 100-DJM250-2826-HA
x15 | D 100-CMX4-2906-HA
x2 | E 100-22-2824-HA
x3 |
|-------------------------------|-----------------------------------|------------------------------------|---------------------------------|-------------------------------|

     

100-COMBO-2962