

Pioneer

Service Manual



XW-SMA3-K

 ORDER NO.
RRV4331

Wireless Sound System

XW-SMA3-K

XW-SMA3-W

XW-SMA1-K

XW-SMA1-W

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
XW-SMA3-K	CUXESM	AC 100 V to 240 V	
XW-SMA3-K	SYXE8	AC 100 V to 240 V	
XW-SMA3-W	SYXE8	AC 100 V to 240 V	
XW-SMA3-K	LXE	AC 100 V to 240 V	
XW-SMA1-K	CUXESM	AC 100 V to 240 V	
XW-SMA1-K	SYXE8	AC 100 V to 240 V	
XW-SMA1-W	SYXE8	AC 100 V to 240 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsela, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE, LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2012

K-ZZZ OCT. 2012 Printed in Japan

(2) CONTRAST TABLE

XW-SMA3-K/CUXESM, SYXE8, LXE, XW-SMA3-W/SYXE8, XW-SMA1-K/CUXESM, SYXE8 and XW-SMA1-W/SYXE8 are constructed the same except for the following:

Mark	No.	Symbol and Description	XW-SMA3-K /CUXESM	XW-SMA3-K /SYXE8	XW-SMA3-K /LXE	XW-SMA3-W /SYXE8
A	1	MAIN BOARD Assy	2S1E-0001028	2S1E-0001029	2S1E-0001031	2S1E-0001029
	4	LED BOARD Assy	2S1E-0001032	2S1E-0001032	2S1E-0001032	2S1E-0001032
	7	Litium Ion Battery	1032-0000024	1032-0000024	1032-0000024	1032-0000024
	13	Ferrite Core	1016-0000084	1016-0000084	1016-0000084	1016-0000084
	14	Front Case Assy	2S1E-0001033	2S1E-0001033	2S1E-0001033	2S1E-0001055
	15	Rear Case Assy	2S1E-0001034	2S1E-0001034	2S1E-0001034	22S1E-0001057
	20	Battry Case Assy	2S1E-0001043	2S1E-0001043	2S1E-0001043	2S1E-0001043
	21	Antenna Assy	2S1E-0001045	2S1E-0001045	2S1E-0001045	2S1E-0001058
	22	SP Grille Assy	2S1E-0001044	2S1E-0001044	2S1E-0001044	2S1E-0001059
	23	CoCl2 Paper	1203-0004723	1203-0004723	1203-0004723	1203-0004723
B	24	Case	1101-0005585	1101-0005585	1101-0005585	1101-0005787
	25	LED Lens	1101-0005588	1101-0005588	1101-0005588	1101-0005588
	27	WPS Key	1101-0005589	1101-0005589	1101-0005589	1101-0005785
	29	Foot Rubber	1105-0000682	1105-0000682	1105-0000682	1105-0000705
	41	Screw	1103-0000362	1103-0000362	1103-0000362	1103-0000370

Mark	No.	Symbol and Description	XW-SMA1-K /CUXESM	XW-SMA1-K /SYXE8	XW-SMA1-W /SYXE8
C	1	MAIN BOARD Assy	2S1E-0001023	2S1E-0001024	2S1E-0001024
	4	LED BOARD Assy	2S1E-0001026	2S1E-0001026	2S1E-0001026
	7	Litium Ion Battery	Not used	Not used	Not used
	13	Ferrite Core	Not used	Not used	Not used
	14	Front Case Assy	2S1E-0001027	2S1E-0001027	2S1E-0001054
	15	Rear Case Assy	2S1E-0001047	2S1E-0001047	2S1E-0001056
	20	Battry Case Assy	Not used	Not used	Not used
	21	Antenna Assy	2S1E-0001045	2S1E-0001045	2S1E-0001058
	22	SP Grille Assy	2S1E-0001044	2S1E-0001044	2S1E-0001059
	23	CoCl2 Paper	Not used	Not used	Not used
D	24	Case	1101-0005573	1101-0005573	1101-0005782
	25	LED Lens	1101-0005578	1101-0005578	1101-0005578
	27	WPS Key	1101-0005580	1101-0005580	1101-0005785
	29	Foot Rubber	1105-0000682	1105-0000682	1105-0000705
	41	Screw	1103-0000362	1103-0000362	1103-0000370

9.2 EXTERIOR SECTION

