


3. BASIC ITEMS FOR SERVICE

3.1 PCB LOCATIONS

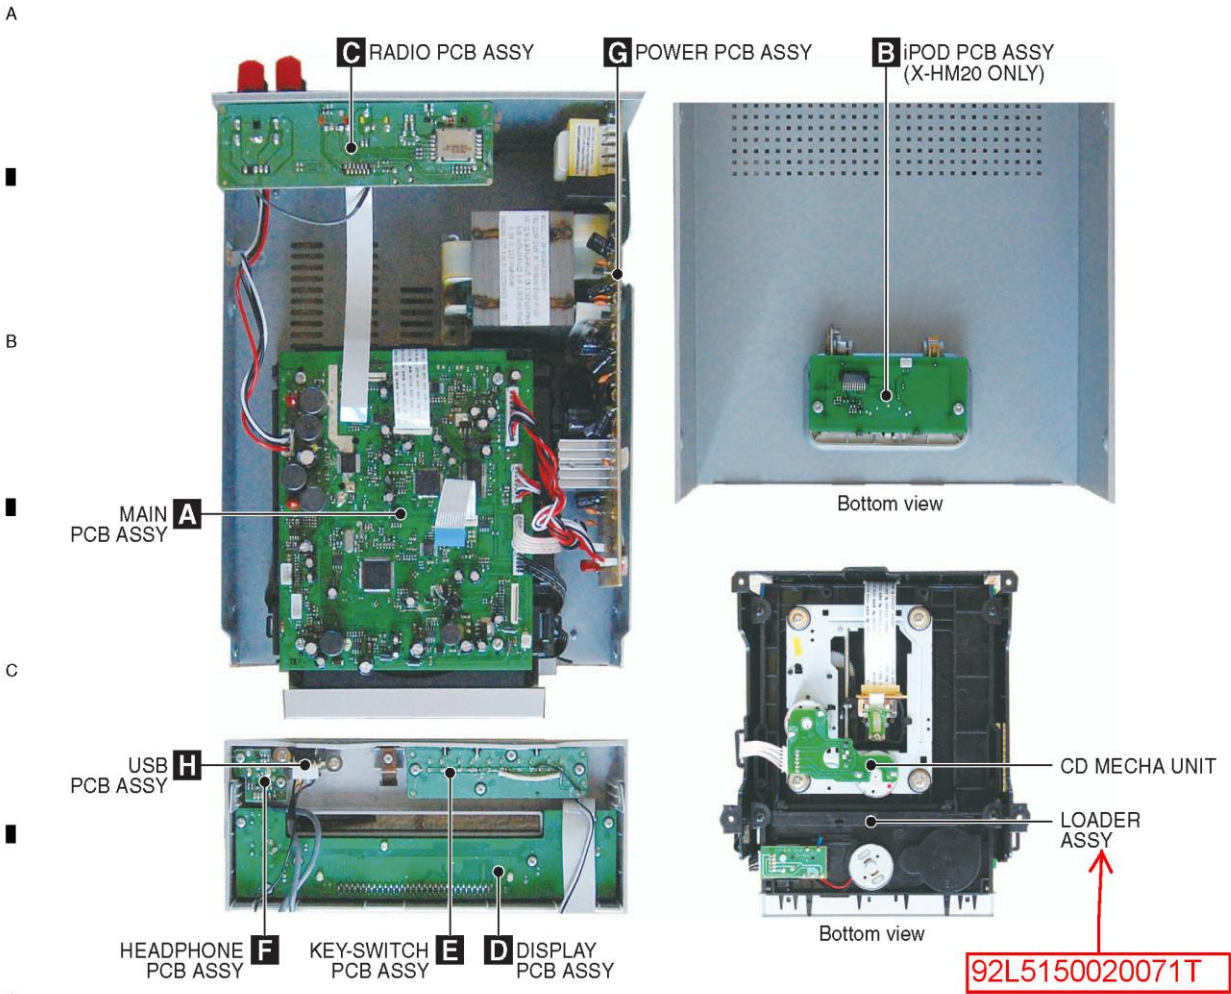

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.  
● The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.  
Therefore, when replacing, be sure to use parts of identical designation.

| Mark               | No.                            | Description | Part No.       | Mark                            | No. | Description    | Part No. |
|--------------------|--------------------------------|-------------|----------------|---------------------------------|-----|----------------|----------|
| LIST OF ASSEMBLIES |                                |             |                |                                 |     |                |          |
| ⚠                  | 1..MAIN PCB ASSY (X-HM20)      |             | 92L36100201011 | 1.iPOD PCB ASSY (X-HM20 ONLY)   |     | 92L36600201010 |          |
|                    | 1..MAIN PCB ASSY (X-HM10)      |             | 92L36100101011 | 1..KEY-SWITCH PCB ASSY (X-HM20) |     | 92L37200201010 |          |
| ⚠                  | 1..POWER PCB ASSY (X-HM20)     |             | 92L36800201010 | 1..KEY-SWITCH PCB ASSY (X-HM10) |     | 92L37200101011 |          |
|                    | 1..POWER PCB ASSY (X-HM10)     |             | 92L36800101010 |                                 |     |                |          |
|                    | 1..DISPLAY PCB ASSY (X-HM20)   |             | 92L36500201010 | 1..CD MECHA UNIT                |     | 92L28700220301 |          |
|                    | 1..DISPLAY PCB ASSY (X-HM10)   |             | 92L36500101010 | 1..LOADER ASSY                  |     | 92L5150020071T |          |
|                    | 1..RADIO PCB ASSY (X-HM20)     |             | 92L36400201010 |                                 |     |                |          |
|                    | 1..RADIO PCB ASSY (X-HM10)     |             | 92L36400101010 |                                 |     |                |          |
|                    | 1..HEADPHONE PCB ASSY (X-HM20) |             | 92L37100201011 |                                 |     |                |          |
|                    | 1..HEADPHONE PCB ASSY (X-HM10) |             | 92L37100101011 |                                 |     |                |          |
|                    | 1..USB PCB ASSY (X-HM20)       |             | 92L36900201011 |                                 |     |                |          |
|                    | 1..USB PCB ASSY (X-HM10)       |             | 92L36900101011 |                                 |     |                |          |