

Pioneer

Service Manual



DV-2010

ORDER NO.
RRV4100

DVD PLAYER

DV-2010

DV-2010K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Region No.	Serial No.	Remarks
DV-2010	SXZT	AC 220 V to 240 V	5	&&&&#####UR	UR: Russia
DV-2010	LXZT	AC 110 V to 240 V	3	&&&&#####LL	LL: Asean
DV-2010	PWXZT	AC 110 V to 240 V	4	&&&&#####PP	PP: Oceania
DV-2010	TXZT	AC 110 V to 240 V	3	&&&&#####TL	TL: Thailand
DV-2010K	SXZT	AC 220 V to 240 V	5	&&&&#####UR	UR: Russia



For details, refer to "Important Check Points for good servicing".

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.


PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2010

K-FZV AUG. 2010 Printed in Japan

3.2 PCB LOCATIONS

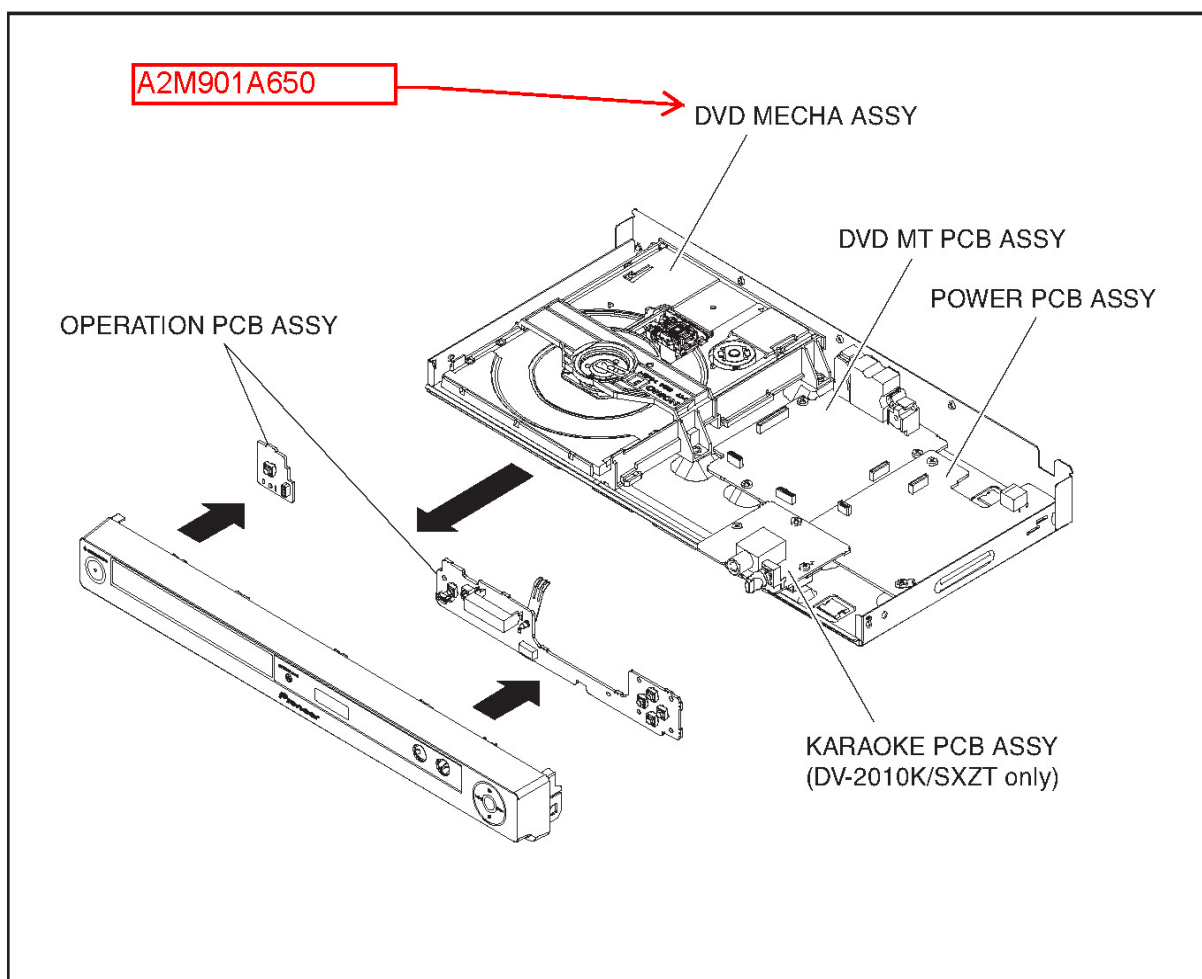

Mark No.	Description	Part No.
LIST OF ASSEMBLIES		
1..	DVD MT PCB ASSY(DV-2010)	A2N201A130
1..	DVD MT PCB ASSY(DV-2010K)	A2N207A130
1..	OPERATION PCB ASSY (DV-2010/SXZT)	A2N201A270
1..	OPERATION PCB ASSY (DV-2010/LXZT)	A2N202A270
1..	OPERATION PCB ASSY (DV-2010/PWXZT)	A2N206A270
1..	OPERATION PCB ASSY (DV-2010/TXZT)	A2N203A270
1..	OPERATION PCB ASSY (DV-2010K/SXZT)	A2N207A270
⚠	1..POWER PCB ASSY(DV-2010/SXZT,LXZT)	A2N201A240
⚠	1..POWER PCB ASSY(DV-2010/PWXZT/TXZT)	A2N203A240
⚠	1..POWER PCB ASSY(DV-2010K/SXZT)	A2N207A240
1	KARAOKE PCB ASSY(DV-2010K)	A2N207AFA0
1..	DVD MECHA ASSY	A2M901A650