

Pioneer

Service Manual



ORDER NO.
RRV4501

NETWORK AV SPEAKER BAR SYSTEM

SBX-N700

SOUND BAR

SBX-N700SB

WIRELESS SUBWOOFER

SBX-N700SW

NETWORK AV SPEAKER BAR SYSTEM

SBX-N500

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
SBX-N700	PWSYXE8	AC 220 V to 240 V	
SBX-N700	VXE8	AC 220 V to 240 V	
SBX-N700	LXE	AC 110 V to 240 V	
SBX-N700SB	PWSYXE8	AC 220 V to 240 V	
SBX-N700SB	VXE8	AC 220 V to 240 V	
SBX-N700SB	LXE	AC 110 V to 240 V	
SBX-N700SW	PWSYXE8	AC 220 V to 240 V	
SBX-N700SW	VXE8	AC 220 V to 240 V	
SBX-N700SW	LXE	AC 110 V to 240 V	
SBX-N500	PWSYXE8	AC 220 V to 240 V	
SBX-N500	VXE8	AC 220 V to 240 V	
SBX-N500	AXQ5	AC 110 V to 240 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2013

K-FZV NOV. 2013 Printed in Japan

8.4 AV SPEAKER BAR FRONT SECTION (SBX-N700SB, SBX-N500)

Note *1: Set the cables in slit of Front Panel ASSY (SB).

Note *2: Apply the Heat Radiation Grease as needed to U709 and U710.



Heat Radiation Grease: Silicon Oil Compound
(GEM1099 or GEM1052)

Note *3: SBX-N700SB/PWSYXE8, SBX-N700SB/VXE8
and SBX-N700SB/LXE only

