


Pioneer

Service Manual

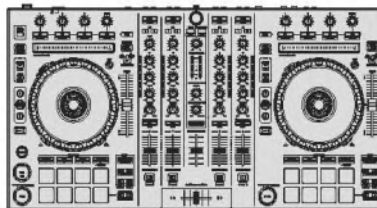

DDJ-SX

ORDER NO.
RRV4382

DJ Controller

DDJ-SX

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
DDJ-SX	UXECB	AC 100 V to 240 V	
DDJ-SX	SVYXE8	AC 100 V to 240 V	
DDJ-SX	FLPXE	AC 100 V to 240 V	
DDJ-SX	AXE5	AC 100 V to 240 V	
DDJ-SX	KXE5	AC 100 V to 240 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2012

K-MZV NOV. 2012 Printed in Japan

EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	CONTROL PCB Assy A	704-DDJS1-A421-HA		46	CUE Button	100-S1B-2993-HA
	2	CONTROL PCB Assy B	704-DDJS1-A454-HA		47	2X Button	100-S1B-2994-HA
	3	TRANSFER PCB Assy	704-DDJS1-A429-HA		48	VINYL Button	100-S1C-2989-HA
	4	DSP PCB Assy	704-DDJS1-A418-HA		49	DECK 4 Button	100-S1C-2990-HA
	5	OUTPUT PCB Assy	704-DDJS1-A425-HA		50	MASTER CUE Button	100-S1C-2993-HA
	6	BAL. PCB Assy	704-DDJS1-A423-HA		51	Button	100-S1C-2994-HA
	7	MIX PCB Assy	704-DDJS1-A417-HA		52	LOAD Button	100-S1D-2993-HA
	8	CH FADER PCB Assy	704-DJM250-A032-HA		53	AUTO LOOP Button	100-S1E-2993-HA
	9	FRONT PCB Assy	704-DDJS1-A424-HA		54	S.S Button	100-S1F-2993-HA
	10	TOUCH PCB Assy	704-DDJS1-A426-HA		55	H.R Button	100-S1G-2993-HA
B	11	LED PCB Assy	704-DDJS1-A422-HA		56	Push Button	100-22-2824-HA
	12	SENSOR PCB Assy	704-PDJ33-A007-HA		57	Ground Terminal	200-S1-665-HA
	13	PAD & FSR Assy	704-S1-A458-HA		58	Sensor Fixed Plate	300-HDJ9800-981-HA
	14	LED & COVER Assy	704-DDJS1-A455-HA		59	Winding Fixture	300-HM510B-224-HA
	15	Power Knob	100-HDJ2000-1641-HA		60	Ground Plate	300-MX200-1743-HA
	16	Rectangular Button	100-SX-2989S-HA		61	Encoder Plate	300-PROS2-848-HA
	17	Windows Lens	100-S1-2985-HA		62	Encoder Fixed Plate	300-PROS2-851-HA
	18	SHIFT Button	100-S1-2989-HA		63	Front Panel	300-S1-2043-HA
	19	DECK 1 Button	100-S1-2990-HA		64	CF Fixed Plate	300-S1-2045-HA
	20	LITTLE ROUND Button	100-S1-2991-HA		65	CH Fader Fixed Plate	300-S1-2046-HA
C	21	2 Key Button	100-S1-2992S-HA		66	XLR Fixed Plate	300-S1-2048-HA
	22	ON Button	100-S1-2993-HA		67	JW LED Base	300-S1-2049-HA
	23	1,2 Button	100-S1-2994-HA		68	••••	
	24	PLAY SYNC Button	100-S1-2995-HA		69	Ground Plate	300-S1-2051-HA
	25	DUAL DECK Button	100-S1-2996-HA		70	Ground Plate	300-S1-2057-HA
	26	LM Lens	100-S1-2997-HA		71	Ground Plate	300-S1-2058-HA
	27	Tempo Lens	100-S1-2998-HA		72	Cover	300-S1-2059-HA
	28	Fixed Plate	100-S1-2999-HA		73	Isolation Plate	300-S1-2060-HA
	29	Strain Relief Bush	100-S1-3000-HA		74	Fixed Cover	300-33-1918-HA
	30	JW Ring	100-S1-3001-HA		75	1P Lead Wire	406-S1-1231-HA
D	31	VR Cover	100-S1-3002-HA		76	••••	
	32	CF Button	100-S1-3003-HA		77	30P 1.0 FFC Cable	406-S1-1233-HA
	33	Button	100-S1-3004-HA		78	37P 1.0 FFC Cable	406-S1-1234-HA
	34	SPEED PUSH Button	100-S1-3005-HA		79	37P 1.0 FFC Cable	406-S1-1235-HA
	35	FX Rotate Knob	100-S1-3006-HA		80	Dust-Proof Slice	501-HDJ9800-1648-HA
	36	Beat Rotate Knob	100-S1-3007-HA		81	Deck Panel	501-S1-2521-HA
	37	Gain Rotate Knob	100-S1-3008-HA		82	Front Panel	501-S1-2522-HA
	38	Filter Rotate Knob	100-S1-3009-HA		83	Search Panel	501-S1-2524-HA
	39	Browser Rotate Knob	100-S1-3010-HA		84	Isolation Slice	501-S1-2542-HA
	40	CENSOR Button	100-S1A-2989-HA		85	••••	
E	41	DECK 2 Button	100-S1A-2990-HA		86	Clip (1mm)	603-S1-394-HA
	42	TAP Button	100-S1A-2993-HA		87	Clip	603-S1-395-HA
	43	IN/OUT Button	100-S1A-2994-HA		88	Velocity Soft Knob	604-S1-608-HA
	44	CENSOR Button (-)	100-S1B-2989-HA		89	Sponge	612-DJFA-373-HA
	45	DECK 3 Button	100-S1B-2990-HA		90	Foot Mat	612-S1-445-HA

1 ■ 2 ■ 3 ■ 4 ■

