

Pioneer

Service Manual



SPH-DA01/XZUC

ORDER NO.
CRT4721

APP RADIO

SPH-DA01 /XZUC

SPH-DA01 /XZEW5



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2011

K-ZZZ JULY 2011 Printed in Japan

EXTERIOR (1) SECTION PARTS LIST

Mark No.	Description	Part No.
1	Tape	121445000134-FY
2	LCD	143420000085-FY
3	Panel	141210301295018-FY
4	Panel	141270500447014-FY
5	DS Tape	121445010235-FY
6	DS Tape	121445000233-FY
7	DS Tape	121445010234-FY
8	Touch Panel	CSX1175
9	Screw	121045000007-FY
10	Micro SD Unit	842CE6666NSD002-FY
11	FFC	143820000298-FY
12	Grille	141210301296018-FY
13	Button	141230303064018-FY
14	Button	141230303065018-FY
15	Door	141290302296018-FY
16	KEY Unit	842CE6666NKB003-FY
17	Spacer	121405000217-FY
18	FFC	143820000280-FY
19	Holder	121240001100000-FY
20	Screw	121103050001-FY
21	TFT Unit(EW5)	843CE6666NTFT004E-FY
	TFT Unit(UC)	843CE6666NTFT004U-FY
22	Holder	141000002767-FY
23	Cushion	121405000208-FY
24	FFC	143820000450-FY
25	Tape	121445000133-FY
26	Cable(Output cable)	123830001253-FY
27	Cord(Control line 1/3)	143835000637-FY
28	Cord(Control line 2/3)	123835000786-FY
29	Socket(Control line 3/3)	123805000215-FY
30	Cushion	121405000082-FY
31	Cushion	121405000229-FY

9.2 EXTERIOR (1)

A

B

C

D

E

F

