

Pioneer

Service Manual



DDJ-WEGO2-K

ORDER NO.
RRV4498

DJ Controller

DDJ-WEGO2-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
DDJ-WEGO2-K	XE5	DC 5 V (USB-bus power only)	
DDJ-WEGO2-K	XE25	DC 5 V (USB-bus power only)	
DDJ-WEGO2-K	XECN5	DC 5 V (USB-bus power only)	
DDJ-WEGO2-R	XE5	DC 5 V (USB-bus power only)	
DDJ-WEGO2-R	XE25	DC 5 V (USB-bus power only)	
DDJ-WEGO2-R	XECN5	DC 5 V (USB-bus power only)	
DDJ-WEGO2-W	XE5	DC 5 V (USB-bus power only)	
DDJ-WEGO2-W	XE25	DC 5 V (USB-bus power only)	
DDJ-WEGO2-W	XECN5	DC 5 V (USB-bus power only)	

- The only difference in appearance between the "DDJ-WEGO2/XE5" and "DDJ-WEGO2/XE25" is the printing on the serial-number labels (the suffix being either "/XE5" or "/XE25").

Their service parts are exactly the same.



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2013

K-MZV NOV. 2013 Printed in Japan

10. SCHEMATIC DIAGRAM

10.1 CONTROL PCB 418-DDJLE-691

