

Pioneer

Service Manual



DDJ-SP1

ORDER NO.
RRV4493

DJ Controller

DDJ-SP1

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
DDJ-SP1	CKSUVYXE5	DC 5 V (USB-bus power only)	
DDJ-SP1	XECN5	DC 5 V (USB-bus power only)	




PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsela, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2013

K-MZV OCT. 2013 Printed in Japan


10. SCHEMATIC DIAGRAM

10.1 MAIN PCB ASSY

A

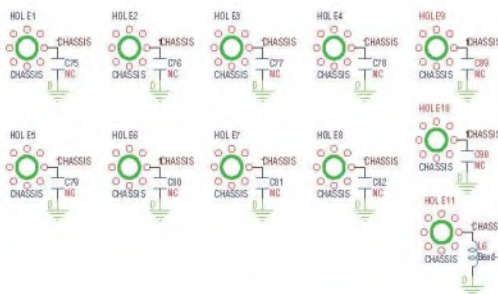

B

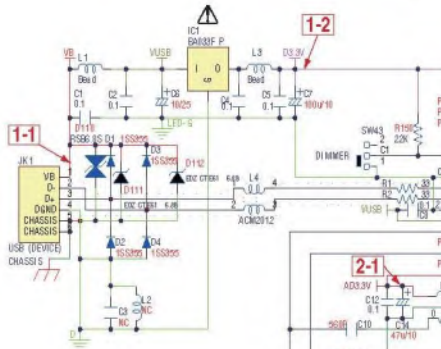


C

The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

△印の部品は、安全上重要な部品です。交換するときは、安全および性能維持のため必ず指定の部品をご使用ください。

D

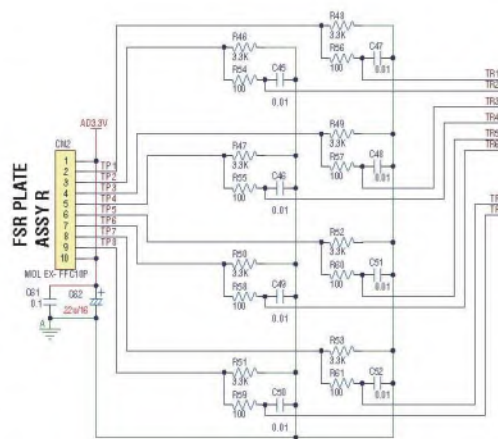


E



F

418-S1-694

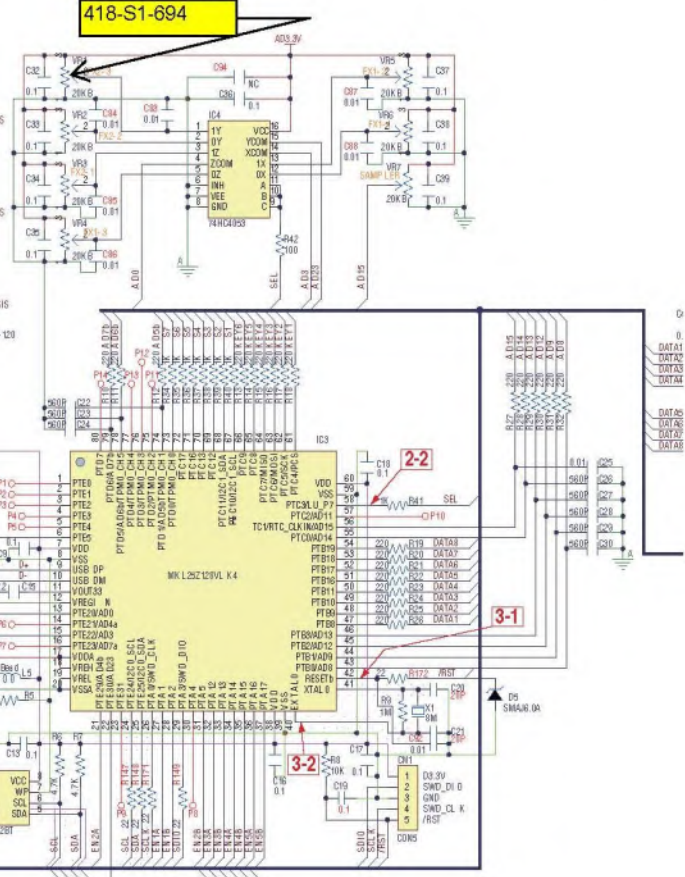

FSR PLATE ASSY R

FSR PLATE ASSY L

A

38

DDJ-SP1