

Pioneer

Service Manual

 ORDER NO.
RRV4330

DVD SURROUND SYSTEM

DCS-424K

HTZ-424DVD

HTZ-421DVD

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	DVD Region No.	Serial No.	Remarks
DCS-424K	YXE8	AC 220 V to 240 V	2	&&TL#####YY	YY:Europe
DCS-424K	SXE5	AC 220 V to 240 V	5	&&TL#####UR	UR: Russia
HTZ-424DVD	LXE	AC 110 V to 240 V	3	&&TL#####LE	LE:Aseana
HTZ-424DVD	TWXE	AC 220 V	3	&&TL#####TL	TL:Thailanda
HTZ-424DVD	DXERB	AC 110 V to 240 V	2	&&TL#####RB	RB : Mid-East-Asia
HTZ-424DVD	AXQ5	AC 220 V	6	&&TL#####CN	CN : China
HTZ-421DVD	DXECS	AC 110 V to 240 V	4	&&TL#####ME	ME : Latin America

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
HTZ-121DVD/LXE	RRV4299	DCS-222K/YXE8

 
For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 ©PIONEER CORPORATION 2012


K-ZZZ AUG. 2012 Printed in Japan

FRONT SPEAKER


A

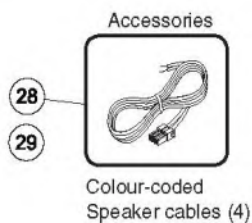


B

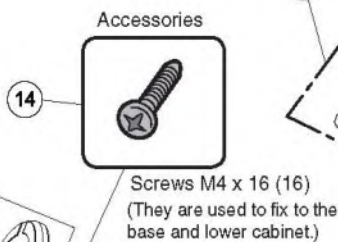 

C

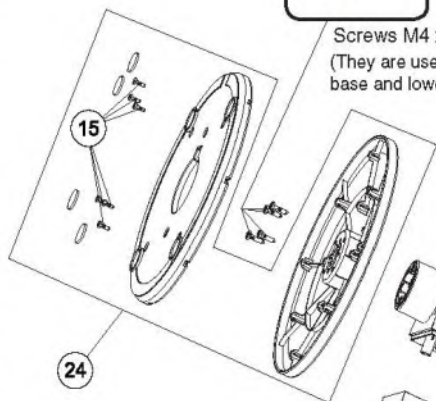 


D

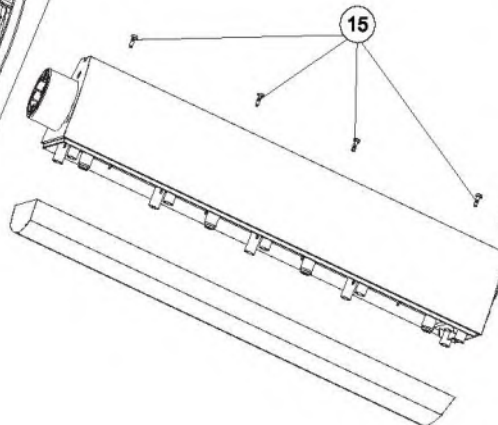 

E

F

 REAR SPEAKER

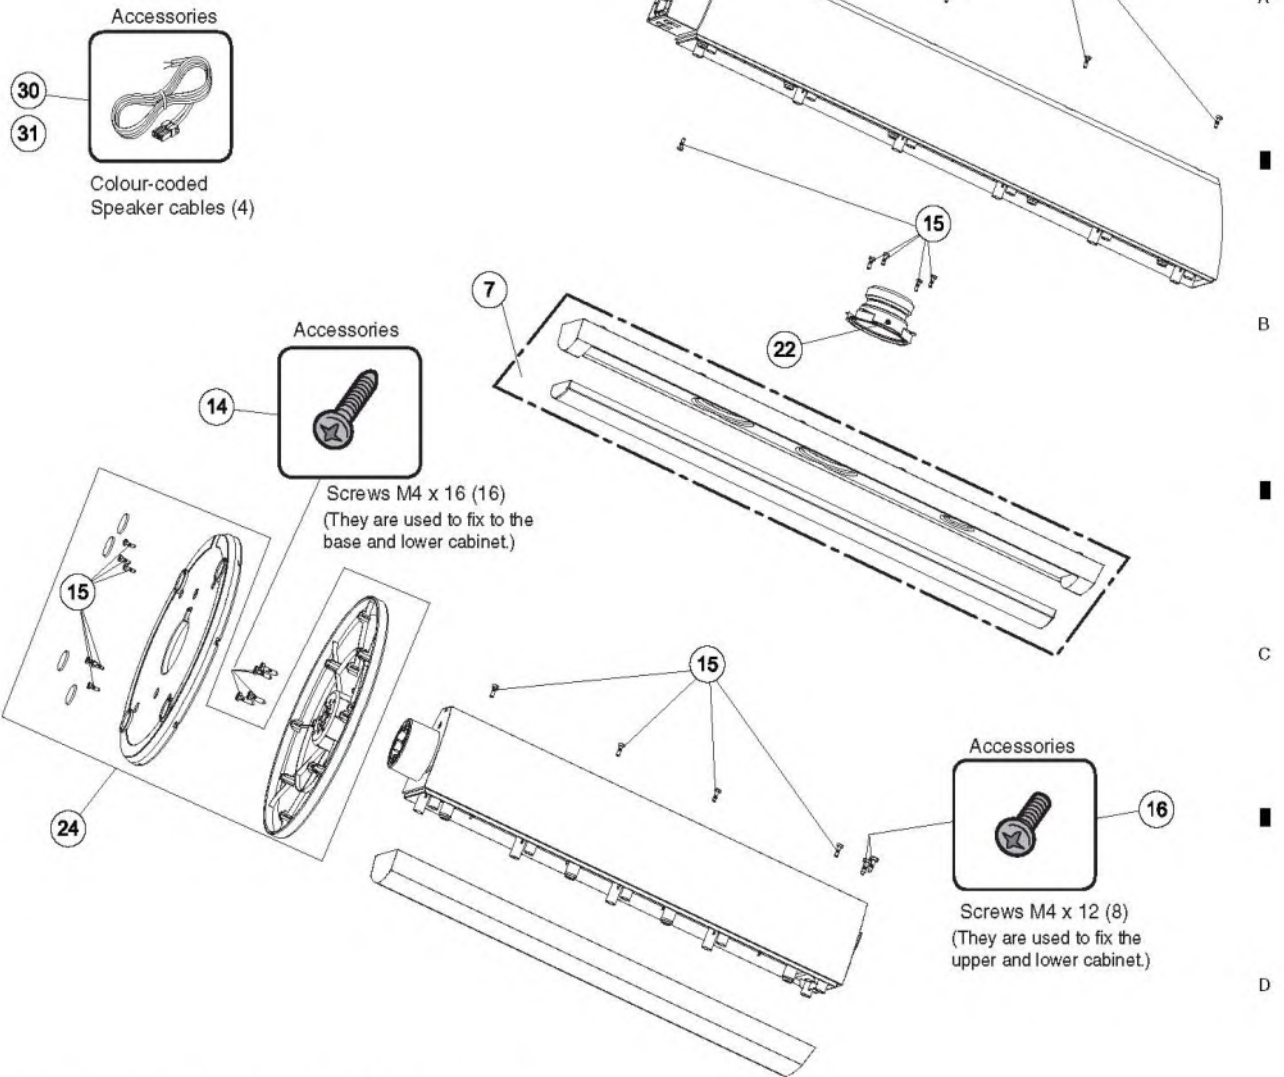

SATELLITE SPEAKER SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	SPEAKER ASSY CENTER	SMX1126- -C	17		
2	SPEAKER ASSY FRONT L	SMX1126- -F-L	18	Cushion Foot	4850E-0036B
3	SPEAKER ASSY FRONT R	SMX1126- -F-R	19	Network Assy	5121V-0001A
4	SPEAKER ASSY SURROUND	SMX1126- -S-L	20	Tweeter	6400V-T003A
5	SPEAKER ASSY SURROUND	SMX1126- -S-R	21	Unit Woofer	6400V-0014A
6	Panel Front Assy (Except AXQ5)	3721V-0005A	22	Unit Woofer	6400V-0015A
7	Panel Front Assy (Except AXQ5)	3721V-0005B	23	Unit Woofer	6400V-0016A
8	Panel Front Assy (Except AXQ5)	3721V-0006A	24	Base Stand Assy	SMX1159-B_EXPORT
9	Bag Poly	3880V-S005A	25	Bag Poly	3880V-S007A
10	Bag Poly	3880V-S008A	26	Packing Base Left	3920V-0027A
11	Packing Top	3920V-0024A	27	Packing Base Right	3920V-0027B
12	Packing Middle	3920V-0025A	28	Wire SPK Assy (White)	5101V-0002A
13	Packing Bottom	3920V-0026A	29	Wire SPK Assy (Red)	5101V-0002B
14	Screw Bind Head	4000V-T004C	30	Wire SPK Assy (Blue)	5101V-0002C
15	Screw	4000V-0001U	31	Wire SPK Assy (Gray)	5101V-0002D
16	Screw Bind Head	4000V-0002J			

DCS-424K