

Mark	No.	Symbol and Description	DCS-222K/YXE8	DCS-424K/YXE8	DCS-424K/SXE5	Remarks
	P44-4	Unit Woofer(N-Shield)	6400V-0018A	6400V-0019A	6400V-0019A	

Notes : The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".

For PCB ASSEMBLIES, Refer to "2. SCHEMATIC DIAGRAM" and "3. PCB CONNECTION DIAGRAM".

HTZ-424DVD

HTZ-121DVD/LXE, HTZ-424DVD/LXE, HTZ-424DVD/TWXE, HTZ-424DVD/DXERB and HTZ-424DVD/AXQ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	HTZ-121DVD /LXE	HTZ-424DVD /LXE	HTZ-424DVD /TWXE	HTZ-424DVD /DXERB	HTZ-424DVD /AXQ5	Remarks
PCB ASSEMBLIES								
	P43-2	1..MAIN BOARD ASSY	08-HTZ121-MA0	08-HTZ121-MA0	08-H89GAU-MA1R	08-H89GAU-MA1R	08-H89GAU-MA1R	
⚠	P43-3	1..POWER BOARD ASSY	08-DCS222-PW0	08-HTZ424-PW0	08-K250HH-PW1	08-K250HH-PW1	08-K250HH-PW1	
	P43-5	1..AMP BOARD ASSY	08-DCS222-AM0	08-HTZ424-AM0	08-T102B6-AM1	08-T102B6-AM1	08-T102B6-AM1	
PACKING SECTION								
⚠	P41-1	AC Power Cord	51-DC0120-0CRA3	51-DC0120-0CRA3	51-D50120-0CR03	51-DC0120-0CRA3	51-GC0120-0CRA5	
	P41-8	Operating Instructions (En/Zhtw)	72-HTZ121-AS0B2	72-HTZ222-AS0B1	Not used	Not used	Not used	
	P41-8	Operating Instructions (Th)	Not used	Not used	72-HTZ222-THAB1	Not used	Not used	
	P41-8	Operating Instructions (En/Ar)	Not used	Not used	Not used	72-HTZ222-MEAB1	Not used	
	P41-8	Operating Instructions (Zhcn)	Not used	Not used	Not used	Not used	72-HTZ222-CHNB1	
	P41-14	Packing Case	76-111710-0ATB2	76-113180-0ATB7	76-113180-0ATB4	76-113180-0ATB5	76-113180-0ATB3	
	P41-15	SPEAKER ASSY CENTER	SMX1124- -C	SMX1126- -C	SMX1126- -C	SMX1126- -C	SMX1133- -C	
	P41-16	SPEAKER ASSY FRONT L	SMX1124- -F-L	SMX1126- -F-L	SMX1126- -F-L	SMX1126- -F-L	SMX1133- -F-L	
	P41-17	SPEAKER ASSY FRONT R	SMX1124- -F-R	SMX1126- -F-R	SMX1126- -F-R	SMX1126- -F-R	SMX1133- -F-R	
	P41-18	SPEAKER ASSY SURROUND	SMX1124- -S-L	SMX1126- -S-L	SMX1126- -S-L	SMX1126- -S-L	SMX1133- -S-L	
	P41-19	SPEAKER ASSY SURROUND	SMX1124- -S-R	SMX1126- -S-R	SMX1126- -S-R	SMX1126- -S-R	SMX1133- -S-R	
	P41-20	Polyethylene Bag	3880V-S004A	Not used	Not used	Not used	Not used	
	P41-21	Packing Top Bottom	3920V-0019A	Not used	Not used	Not used	Not used	
	P41-22	SPEAKER ASSY SUB-WOOFER	SMX1128- -W	SMX1129- -W	SMX1129- -W	SMX1129- -W	SMX1135- -W	
	P41-23	Soft Bag	MAF62208304	3880L-S028A	3880L-S028A	3880L-S028A	3880L-S028A	
	P41-24	Packing Top Bottom	3920V-0002A	3920V-0028A	3920V-0028A	3920V-0028A	3920V-0028A	
EXTERIOR SECTION								
	P43-7	VOL Knob ASSY	02-DC22N1-XX0B2	02-DC22N1-XX0B1	02-DC22N1-XX0B1	02-DC22N1-XX0B1	02-DC22N1-XX0B1	
	P43-8	Cable 8pin 180mm	46-CD018T-08K	46-CD020T-08K	46-CD020T-08K	46-CD020T-08K	46-CD020T-08K	
	P43-12	FFC 24pin 110mm	46-KK011C-24AU	46-KK009C-24AU	46-KK009C-24AU	46-KK009C-24AU	46-KK009C-24AU	
	P43-16	Front Panel ASSY	08-HTZ121-001	08-HTZ424-001	08-HTZ424-001	08-HTZ424-001	08-HTZ424-001	
	P43-17	TJC3-4Y/ASAN-4P	46-CD004T-04B	46-CD004T-06X	46-CD004T-06X	46-CD004T-06X	46-CD004T-06X	
	P43-19	Rear Panel	67-DC22B1-0E0B1	67-DC22B5-0E0B1	67-DC22B5-0E0B1	67-DC22B5-0E0B1	67-DC22B5-0E0B7	
	P43-20	Bottom Plate	67-DC22R1-0E0	67-DC22R2-0E0	67-DC22R2-0E0	67-DC22R2-0E0	67-DC22R2-0E0	
		DC Fan	Not used	43-FM412S-211	43-FM412S-211	43-FM412S-211	43-FM412S-211	No. 27
		M/C Screw B3.0 X 6.0	Not used	63-B40080-BF4	63-B40080-BF4	63-B40080-BF4	63-B40080-BF4	No. 28
		Ground Plate	Not used	67-DC22Q1-0B0	67-DC22Q1-0B0	67-DC22Q1-0B0	67-DC22Q1-0B0	No. 29
		Thermal Silica	Not used	59-115780-000	59-115780-000	59-115780-000	59-115780-000	No. 30
		S/T Screw B 2.6 X 6	63-B26060-BF4	Not used	Not used	Not used	Not used	
SUBWOOFER SECTION								
	P44-1	Panel Front ASSY	3721V-0007V	3721V-0007A	3721V-0007A	3721V-0007A	None	
	P44-4	Unit Woofer(N-Shield)	6400V-0018A	6400V-0019A	6400V-0019A	6400V-0019A	6400V-0019A	

Notes : The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".

For PCB ASSEMBLIES, Refer to "2. SCHEMATIC DIAGRAM" and "3. PCB CONNECTION DIAGRAM".

DCS-424K

3