


Pioneer

Service Manual

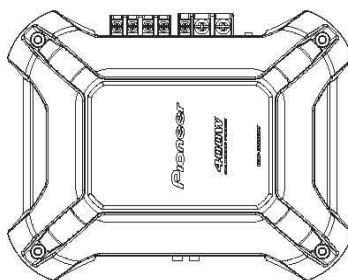

GM-3500T/XZUC

ORDER NO.
CRT4708

BRIDGEABLE TWO-CHANNEL POWER AMPLIFIER

GM-3500T

 /XZUC

GM-3500T

 /XZEW5

GM-3500T

 /XZES

For details, refer to "Important Check Points for Good Servicing".

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan**PIONEER ELECTRONICS (USA) INC.** P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.**PIONEER EUROPE NV** Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium**PIONEER ELECTRONICS ASIACENTRE PTE. LTD.** 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2011


K-ZZZ APR. 2011 Printed in Japan

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	B020020063P10-IL	13	PCB Kit	7025CA1001010-IL	
2	Screw	B020026081B10-IL	14	Screw	B020030101B10-IL	A
3	Screw	B020030081W10-IL	15	RCA Jack	G601206B0500Y-IL	
4	SCREW,TAP TITE	B020030083B10-IL				
5	SCREW,TAP TITE	B020030083B10-IL	16	BATT Terminal	G61801JXZ3X10-IL	
			17	Screw SP Terminal	G61801JXZ4X10-IL	
6	Screw	B020030103B10-IL	18	Fuse Holder	G640000200010-IL	
7	Screw	B020030123W10-IL	19	Board in Connector	L102250040020-IL	
8	Heat Sink	2127211978000-IL	20	Terminal	3790040886000-IL	
9	Case	3200213876000-IL				
10	Panel	3207213846000-IL	21	Holder	4010215146000-IL	
			22	Fuse(25 A)	CEK1329	
11	Panel	3207213856000-IL	23	Insulator	See the following note	B
12	Plate	4317215391000-IL	24	Screw	B020930061B10-IL	

NOTE) These insulators are supplied with Power Transistors. Please order Power Transistors.

9.2 EXTERIOR

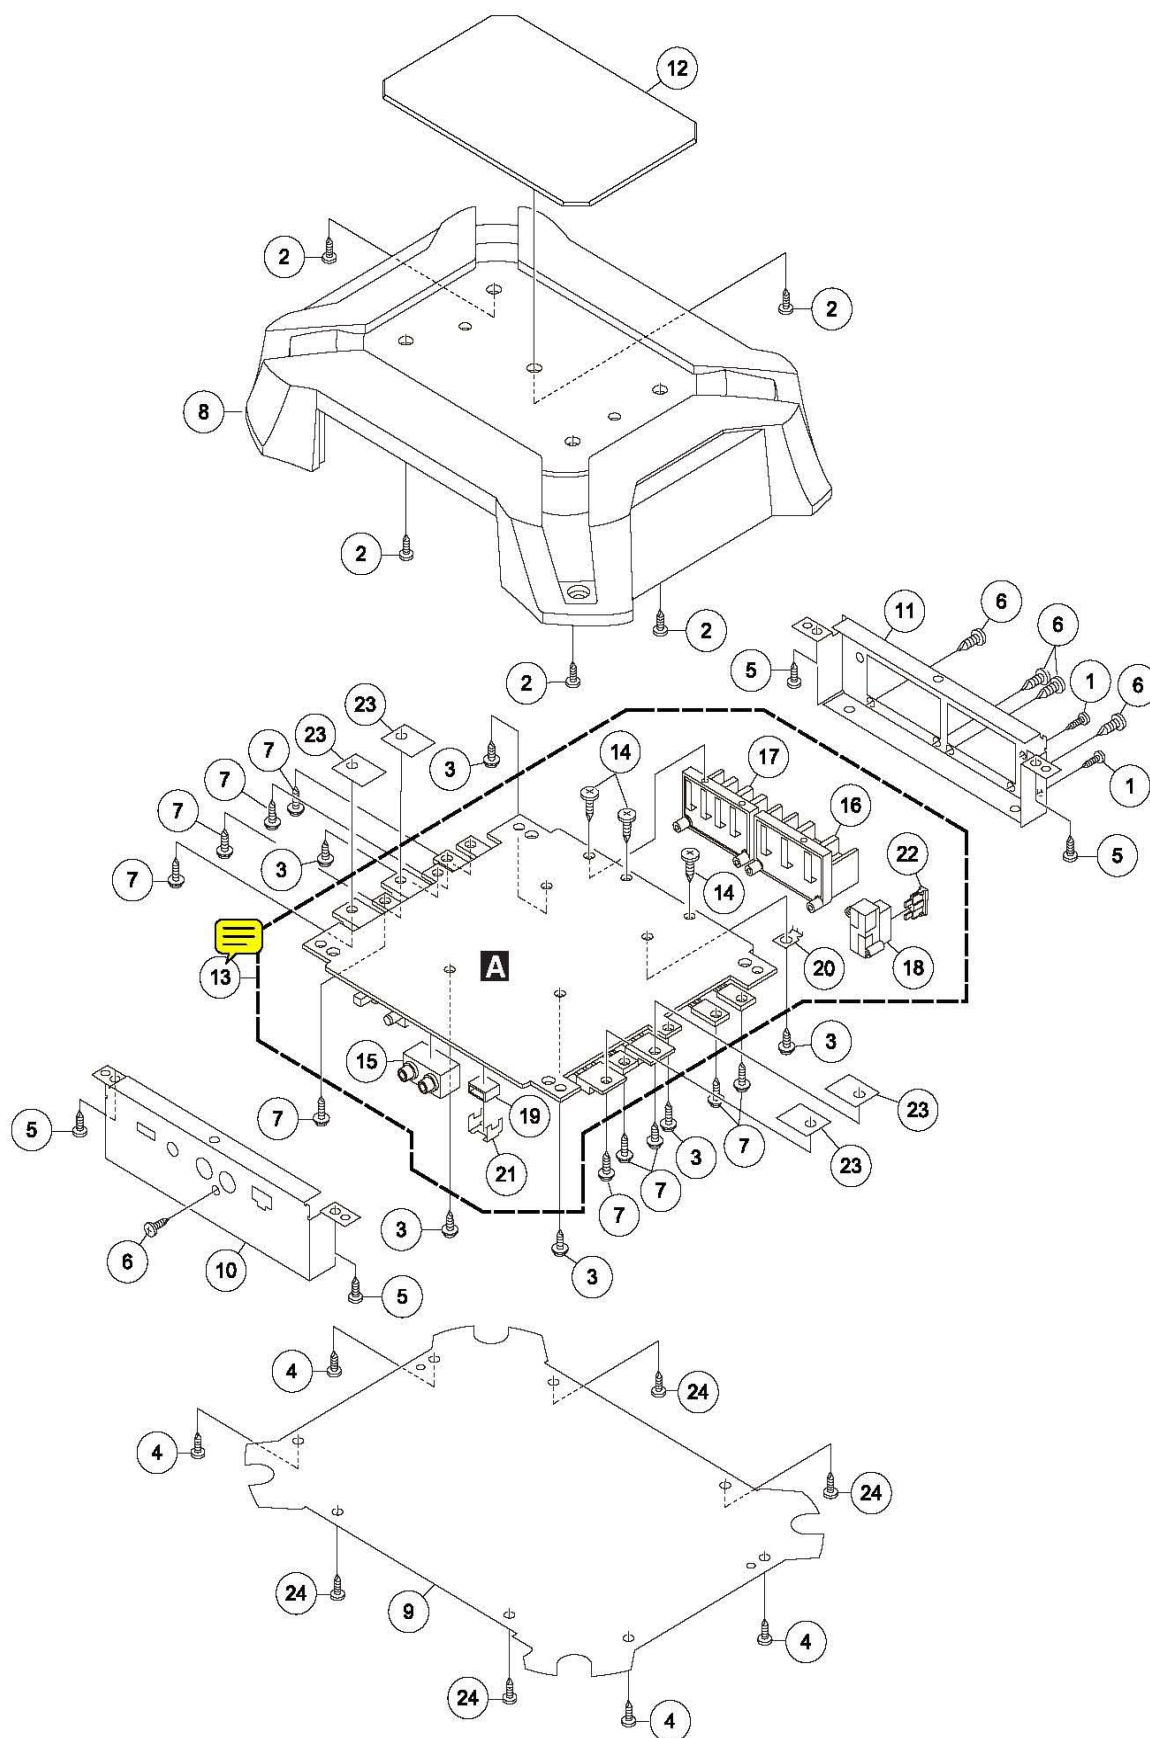

GM-3500T/XZUC