

Pioneer

Service Manual



DDJ-WEGO-K

ORDER NO.
RRV4381

DJ CONTROLLER

DDJ-WEGO-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
DDJ-WEGO-K	XE5	DC 5 V (USB-bus power only)	
	XECN5		
DDJ-WEGO-W	XE5		
	XECN5		
DDJ-WEGO-V	XE5		
DDJ-WEGO-G	XE5		
DDJ-WEGO-R	XE5		
	XECN5		



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsela, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 ©PIONEER CORPORATION 2012

K-MZV OCT. 2012 Printed in Japan

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CONTROL PCB Assy	704-DDJLE-A368	36	Locking Cable Clip	300-HM510B-224	
2	IO PCB Assy	704-DDJLE-A367	37	Locking Cable Clip	300-HM510B-224A	A
3	MASTER PCB Assy	704-DDJLE-A372	38	Locking Cable Clip	504-HV3500K-033	
4	WHEEL (R) PCB Assy	704-DDJLE-A370	39	Clip	603-PROS2-256A	
5	WHEEL (L) PCB Assy	704-DDJLE-A371	40	Foot Pad	604-DDJLE-604	
6	1P Lead Wire	406-DDJLE-1227	41	Plug	See Contrast table (2)	
7	10P FFC Cable	406-SP2U-1067V	42	Cushion	612-DDJLE-441	
8	•••••		43	Sponge	612-PDJ22-428	
9	Wheel Ring Assy	701-DDJLE-5224	44	Cushion	612-202-220	
10	Wheel Frame	100-DDJLE-2942S	45	Chassis Assy	701-DDJLE-5223	
11	Decorating Sheet	501-DDJLE-2508	46	Fixed Base Assy	703-DDJLE-1376	B
12	Spring	603-M1-384	47	E Ring	606-DJ3000-105	
13	Screw	602-BTP2006-733B	48	Pulley Washer	606-F200-003	
14	Screw	602-ST2003-677	49	Washer	606-MCD810-204	
15	Wheel Tooth	100-DDJLE-2943	50	Washer	606-MCD810-205	
16	JOG Tuning Knob	100-DDJLE-2944	51	Washer	612-DDJLE-447	
17	Rotate Knob	100-DDJLE-2945	52	Washer	606-DDJLE-260	
18	FX Knob	100-DDJLE-2946	53	•••••		
19	HOT CUE Knob	100-DDJLE-2947	54	•••••		
20	PLAYCUE Knob	100-DDJLE-2948	55	Screw	602-HP1010K-181	C
21	SQUARE Knob	100-DDJLE-2949	56	Screw	602-LC58FA-371	
22	CIRCULAR Knob	100-DDJLE-2950	57	Screw	602-M100-031	
23	ELLIPTIC Knob	100-DDJLE-2951	58	Screw	See Contrast table (2)	
24	Push Knob	100-DDJLE-2952	59	Screw	602-QMX2BPM-322	
25	LED Lens	100-DDJLE-2953	60	Screw	602-SA12-414	
26	Left Knob	100-DDJLE-2954	61	Screw	602-SL24F-099	
27	Right Knob	100-DDJLE-2955	62	Screw	602-STR885-354	
28	SQUARE Knob	100-DDJLEA-2949	63	Screw	602-ST306-728B	
29	CIRCULAR Knob	100-DDJLEA-2950	64	Screw	602-ST2003-677	D
30	Base	See Contrast table (2)				
31	CIRCULAR Knob	100-DDJLEB-2950				
32	VR Fixed Plate	300-DDJLE-2029				
33	L Output Fixed Plate	300-DDJLE-2030				
34	R Output Fixed Plate	300-DDJLE-2031				
35	Large Ground Plate	300-DDJLE-2055				

(2) CONTRAST TABLE

DDJ-WEGO-K/XE5, DDJ-WEGO-K/XECN5, DDJ-WEGO-W/XE5, DDJ-WEGO-W/XECN5, DDJ-WEGO-V/XE5, DDJ-WEGO-G/XE5, DDJ-WEGO-R/XE5 and DDJ-WEGO-R/XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO-K /XE5	DDJ-WEGO-K /XECN5	DDJ-WEGO-W /XE5	DDJ-WEGO-W /XECN5
	30	Base	100-DDJLEB-2940	100-LEKB-2940	100-DDJLE-2940	100-LEWB-2940
	41	Plug	604-DDJLEB-606	604-DDJLEB-606	604-DDJLE-606	604-DDJLE-606
	58	Screw	602-PTB3010-674Z	602-PTB3010-674Z	602-PTB3010-674B	602-PTB3010-674B
Mark	No.	Symbol and Description	DDJ-WEGO-V /XE5	DDJ-WEGO-G /XE5	DDJ-WEGO-R /XE5	DDJ-WEGO-R /XECN5
	30	Base	100-DDJLEC-2940	100-DDJLEA-2940	100-DDJLED-2940	100-LERB-2940
	41	Plug	604-DDJLEC-606	604-DDJLEA-606	604-DDJLED-606	604-DDJLED-606
	58	Screw	602-PTB3010-674Z	602-PTB3010-674B	602-PTB3010-674Z	602-PTB3010-674Z

9.2 EXTERIOR SECTION

A

B

C

D

E

F

