

## Service Manual



PLX-500-K

ORDER NO.  
**RRV4664**

TURNTABLE

# PLX-500-K PLX-500-W

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Model         | Type     | Power Requirement                   | Remarks |
|---------------|----------|-------------------------------------|---------|
| PLX-500-K, -W | LPWSYXEG | AC 110 V to 120 V or 220 V to 240 V |         |
| PLX-500-K, -W | FWUXEGCB | AC 110 V to 120 V or 220 V to 240 V |         |

THIS SERVICE MANUAL SHOULD BE USED TOGETHER WITH THE FOLLOWING MANUAL(S).

| Model         | Order No. | Remarks                                                   |
|---------------|-----------|-----------------------------------------------------------|
| PLX-500-K, -W | RRV4665   | SCHEMATIC DIAGRAM, PCB CONNECTION DIAGRAM, PCB PARTS LIST |



Pioneer DJ Corporation

6F, Yokohama I-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 JAPAN

## 9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.  
(In the case of no amount instructions, apply as you think it appropriate.)

## 9.1 PACKING SECTION

