 


Pioneer

Service Manual



S-ESR2-LR

ORDER NO.
RRV4200

SPEAKER SYSTEM

S-ESR2-LR /SXTWEK5

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.


PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2011

K-ZZZ AUG. 2011 Printed in Japan

2.2 CS ASSY (FRONT)

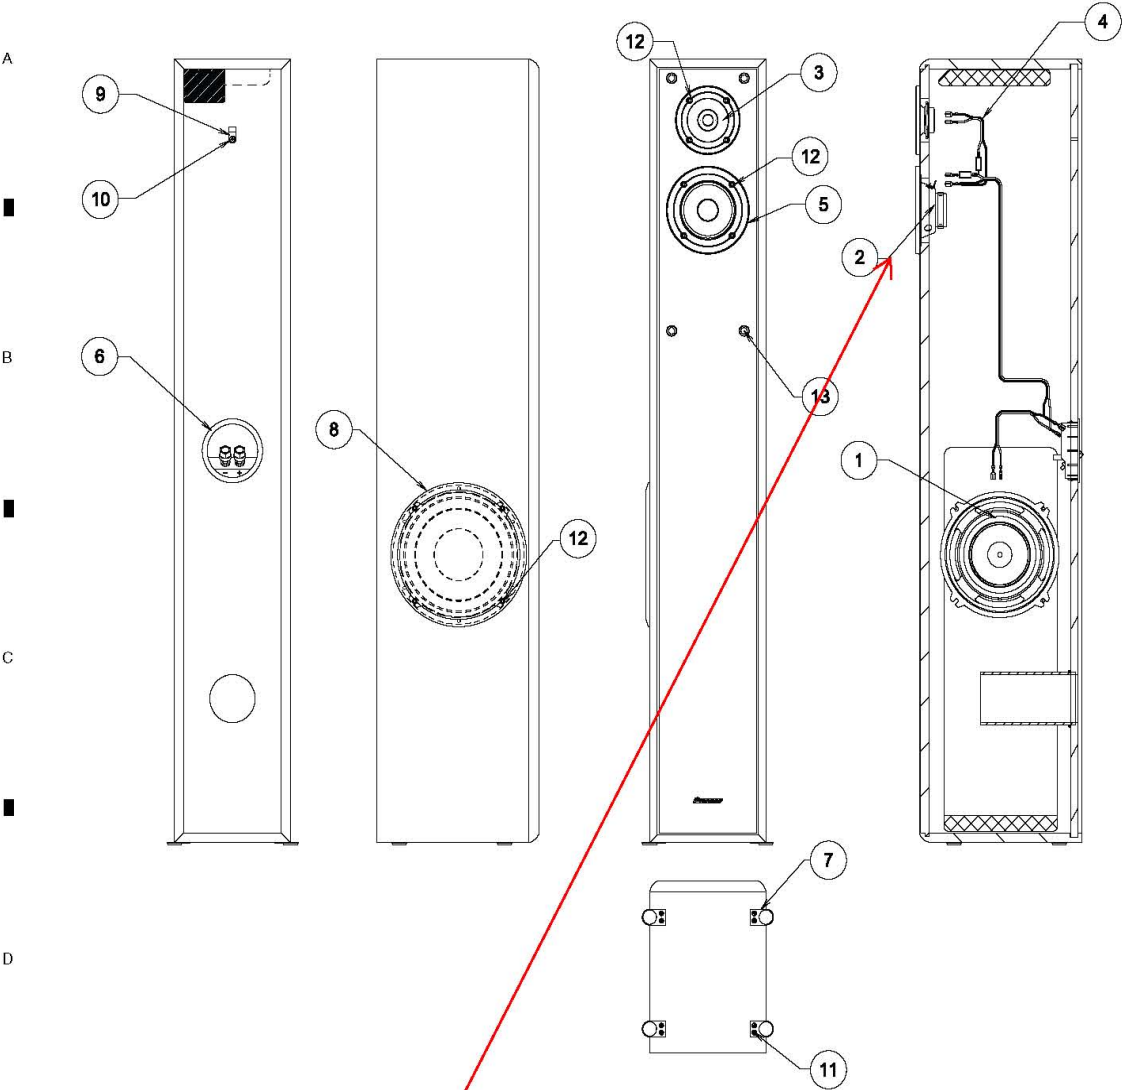

CS ASSY(FRONT) Parts List

Mark	No.	Description	Part No.
E	1	Speaker	16-1593PA/XTW
	2	Speaker	77-210PA/XTW-13
	3	Tweeter	DS-844PA
	4	Network Assy	SWN1860
	5	Flange	SFR1094
	6	Input Terminal	SKX1116
	7	Foot Assy	SXK1050
	8	Grille Assy	SMG1939
	9	Fastener	SNB6003
	10	Screw	BYC35P120FBN
F	11	Screw	CWC31P160FTB
	12	Screw	SBA1319
	13	Catch	SNK2584