

Pioneer

Service Manual



ORDER NO.
RRV4322

NETWORK CD RECEIVER SYSTEM

X-HM81-K

X-HM81-S

X-HM71-K X-HM71-S

NETWORK CD RECEIVER

XC-HM81-K XC-HM81-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
X-HM81-K, X-HM81-S	SYXE8	AC 220 V to 240 V	
XC-HM81-K, XC-HM81-S	SYXE8	AC 220 V to 240 V	
X-HM71-K, X-HM71-S	SYXE8	AC 220 V to 240 V	
X-HM71-K	CXE	AC 120 V	
X-HM71-S	AXQ5	AC 220 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 ©PIONEER CORPORATION 2012

K-MZV AUG. 2012 Printed in Japan

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 FRONT Assy	7028072531010-IL	46	Knob Assy	See Contrast table (2)
	2 CNT1 Assy	•••••	47	Button 5 Key	See Contrast table (2)
	3 KEY Assy	7028072533010-IL	48	Button Standby	See Contrast table (2)
	4 TUNER Assy	See Contrast table (2)	49	Label Window	5507000010141-IL
	5 F_AUX Assy	7028072535010-IL	50	•••••	
NSP	6 F_USB Assy	7028072536010-IL	51	•••••	
	7 BT Assy	See Contrast table (2)	52	Screw, Tap Tite	B020920051B10-IL
	8 MAIN Assy	See Contrast table (2)	53	Screw	B020030051B10-IL
	9 POWER Assy	See Contrast table (2)	54	Screw	B020030081B10-IL
	10 BCO_STOPPER Assy	•••••	55	Screw, Tap Tite	B020230083B10-IL
B	11 DOCKING Assy	7028072544010-IL	56	Screw	B020030171B10-IL
	12 BCO Assy	See Contrast table (2)	57	Screw	BBT30P100FTB
	13 CNT2 Assy	See Contrast table (2)	58	Screw	B028940101B11-IL
	14 CNT3 Assy	•••••	59	Screw	See Contrast table (2)
	15 CD Assy	7028072301010-IL	60	Screw	See Contrast table (2)
C	16 MECHA	8030000010080-IL	61	Module	8952HM7100030-IL
	17 Display, LCD	K550240600010-IL			
	18 Power Cord	See Contrast table (2)			
	19 CN, Wire 2mm	L002151060160-IL			
	20 CN, Wire 2mm	L002171050060-IL			
D	21 CN, Wire 2mm	L002401060080-IL			
	22 CN, Wire 2mm	L002401080090-IL			
	23 Cable Flat Card	L301900400010-IL			
	24 Cable Assy	L308151010040-IL			
	25 Cable Flat Card 1.0	N711161522480-IL			
E	26 Sheet Speaker	1210211573000-IL			
	27 Bush (PLS)	See Contrast table (2)			
	28 Cabinet	See Contrast table (2)			
	29 Panel	See Contrast table (2)			
	30 Back Chassis	See Contrast table (2)			
F	31 Frame	See Contrast table (2)			
	32 Foot	See Contrast table (2)			
	33 Cushion	4050211385000-IL			
	34 Cushion	4050211745000-IL			
	35 Cushion	4050213305000-IL			
F	36 Cushion Foot	4050213645000-IL			
	37 Cushion iPod	See Contrast table (2)			
	38 Cushion FLT (BCO2)	4050214045000-IL			
	39 Cover Tray CD	See Contrast table (2)			
	40 Cover iPod	See Contrast table (2)			
F	41 Holder	See Contrast table (2)			
	42 Guide	4350210471000-IL			
	43 Stopper	4380040162010-IL			
	44 Plate	4470212226000-IL			
	45 Window	5077213343000-IL			

9.2 EXTERIOR SECTION

A

B

C

D

E

F

