

Pioneer

Service Manual

ORDER NO.
RRV4438

AV Receiver

VSX-323-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-323-K	SYXE8	AC 220 V to 230 V	
VSX-323-K	PWVXE8	AC 220 V to 240 V	
VSX-323-K	DLXE	AC 110 V to 127 V/220 V to 240 V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
HTP-072/CMXESM 	RRV4432	VSX-324-K-P/YXE8, DLXE, PWXE

For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2013

K-ZZZ MAY 2013 Printed in Japan

Mark	No.	Symbol and Description	VSX-324-K-P /YXEB	VSX-323-K /SYXE8	VSX-323-K /PWVXE8	VSX-323-K /DLXE	Remarks
NSP		Operating Instructions VSX-323/523 (En) (pdf)	Not used	Not used	Not used	ARB7522	A
NSP		Operating Instructions VSX-323/523 (Es) (pdf)	Not used	Not used	Not used	ARC8209	
NSP		Operating Instructions VSX-323/523 (Zhtw) (pdf)	Not used	Not used	Not used	ARC8210	
NSP		Operating Instructions VSX-528/828 (En) (pdf)	Not used	ARB7521	ARB7521	Not used	
NSP		Operating Instructions VSX-528/828 (Fr) (pdf)	Not used	ARC8203	ARC8203	Not used	
NSP		Operating Instructions VSX-528/828 (De) (pdf)	Not used	ARC8204	ARC8204	Not used	
NSP		Operating Instructions VSX-528/828 (It) (pdf)	Not used	ARC8205	ARC8205	Not used	
NSP		Operating Instructions VSX-528/828 (Es) (pdf)	Not used	ARC8206	ARC8206	Not used	
NSP		Operating Instructions VSX-528/828 (Nl) (pdf)	Not used	ARC8207	ARC8207	Not used	B
NSP		Operating Instructions VSX-528/828 (Ru) (pdf)	Not used	ARC8208	ARC8208	Not used	
NSP		Operating Instructions VSX-823 (En) (pdf)	Not used	Not used	Not used	ARB7523	
NSP		Operating Instructions VSX-823 (Es) (pdf)	Not used	Not used	Not used	ARC8211	
NSP		Operating Instructions VSX-823 (Zhtw) (pdf)	Not used	Not used	Not used	ARC8212	
NSP	P43-13	Quick Start Guide	5707000008050-IL	5707000007820-IL	5707000007820-IL	5707000007830-IL	
	P43-16	Box, Gift	Not used	60072123701F0-IL	60072123701G0-IL	60072123701H0-IL	
	P43-17	Cushion, Snow	6230212914000-IL	6230213384000-IL	6230213384000-IL	6230213384000-IL	
	P43-18	PE, Sheet	6327040059000-IL	6327040059000-IL	6327040059000-IL	6327040059000-IL	
	P43-24	Warranty Card	Not used	ARY7158	ARY7158	Not used	
		EXTERIOR SECTION (VSX-323-K)					
⚠	P46-16	Cord Assy	L068250161710-IL	L068250161710-IL	Not used	Not used	C
⚠	P46-17	Socket, Power AC	Not used	Not used	G430040560021-IL	G430040560021-IL	
⚠	P46-18	Power Trans	8200858500320-IL	8200858500320-IL	8200858500320-IL	8200858500350-IL	
	P46-23	Cable, Flat Card 1.0	N711251022480-IL	N711250822480-IL	N711250822480-IL	N711250822480-IL	
	P46-26	Cabinet Assy	3008211846020-IL	3008212076000-IL	3008212076000-IL	3008212076100-IL	
	P46-27	Front Panel	3067215861100-IL	3067215861110-IL	3067215861110-IL	3067215861110-IL	
	P46-28	Chassis Back	3207214696030-IL	3207214566010-IL	3207214566110-IL	3207214566210-IL	
	P46-35	Stopper	4380040162010-IL	4380040162010-IL	Not used	Not used	
	P46-46	Screw, Tap Tite	Not used	B020930083B10-IL	B020930083B10-IL	B020930083B10-IL	
		Screw	B020030081B10-IL	Not used	Not used	Not used	
		Screw	CBZ30P080FTB	Not used	Not used	Not used	D
		Bushing	Not used	2410040353010-IL	2410040353010-IL	2410040353010-IL	
		Sheet	Not used	1210210235000-IL	1210210235000-IL	1210210235000-IL	
		Screw Cover	Not used	4050211745100-IL	4050211745100-IL	4050211745100-IL	No. 61

Notes : The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".

For PCB ASSEMBLIES, Refer to "CONTRAST OF PCB ASSEMBLIES", "PCB PARTS LIST", "3. SCHEMATIC DIAGRAM" and "4. PCB CONNECTION DIAGRAM".

