

Pioneer

Service Manual

ORDER NO.
RRV4441

AV Receiver

VSX-828-K

VSX-828-S

VSX-528-K

VSX-528-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-828-K	SYXE8	AC 220 V to 230 V	
VSX-828-S	SYXE8	AC 220 V to 230 V	
VSX-528-K	SYXE8	AC 220 V to 230 V	
VSX-528-S	SYXE8	AC 220 V to 230 V	
VSX-528-K	PWVXE8	AC 220 V to 240 V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
VSX-1023-K/CUXESM	RRV4419	VSX-823-K/CUXESM

For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2013

K-ZZZ APR. 2013 Printed in Japan

Mark	No.	Symbol and Description	VSX-823-K /CUXESM	VSX-528-K /SYXE8	VSX-528-S /SYXE8	VSX-528-K /PWVXE8	Remarks
A		PACKING SECTION					
	P69-1	Remote Control (AXD7691)	8300769100010-IL	Not used	Not used	Not used	
	P69-1	Remote Control (AXD7692)	Not used	8300769200010-IL	8300769200010-IL	8300769200010-IL	
	P69-5	Operating Instructions (CD-ROM)	6517000001280-IL	6517000001300-IL	6517000001300-IL	6517000001300-IL	
	NSP	Operating Instructions_VSX-523 (En)(pdf)	ARB7517	Not used	Not used	Not used	
	NSP	Operating Instructions_VSX-523 (Frca)(pdf)	ARC8192	Not used	Not used	Not used	
	NSP	Operating Instructions_VSX-523 (Es)(pdf)	ARC8193	Not used	Not used	Not used	
	NSP	Operating Instructions_VSX-323/423 (En)(pdf)	Not used	ARB7520	ARB7520	ARB7520	
	NSP	Operating Instructions_VSX-323/423 (Fr)(pdf)	Not used	ARC8197	ARC8197	ARC8197	
	NSP	Operating Instructions_VSX-323/423 (De)(pdf)	Not used	ARC8198	ARC8198	ARC8198	
B	NSP	Operating Instructions_VSX-323/423 (It)(pdf)	Not used	ARC8199	ARC8199	ARC8199	
	NSP	Operating Instructions_VSX-323/423 (Es)(pdf)	Not used	ARC8200	ARC8200	ARC8200	
	NSP	Operating Instructions_VSX-323/423 (Nl)(pdf)	Not used	ARC8201	ARC8201	ARC8201	
	NSP	Operating Instructions_VSX-323/423 (Ru)(pdf)	Not used	ARC8202	ARC8202	ARC8202	
	NSP	Operating Instructions_VSX-823 (En)(pdf)	ARB7518	Not used	Not used	Not used	
	NSP	Operating Instructions_VSX-823 (Frca)(pdf)	ARC8194	Not used	Not used	Not used	
	NSP	Operating Instructions_VSX-823 (Es)(pdf)	ARC8195	Not used	Not used	Not used	
	NSP	Operating Instructions_VSX-528/828 (En)(pdf)	Not used	ARB7521	ARB7521	ARB7521	
	NSP	Operating Instructions_VSX-528/828 (Fr)(pdf)	Not used	ARC8203	ARC8203	ARC8203	
	NSP	Operating Instructions_VSX-528/828 (De)(pdf)	Not used	ARC8204	ARC8204	ARC8204	
C	NSP	Operating Instructions_VSX-528/828 (It)(pdf)	Not used	ARC8205	ARC8205	ARC8205	
	NSP	Operating Instructions_VSX-528/828 (Es)(pdf)	Not used	ARC8206	ARC8206	ARC8206	
	NSP	Operating Instructions_VSX-528/828 (Nl)(pdf)	Not used	ARC8207	ARC8207	ARC8207	
	NSP	Operating Instructions_VSX-528/828 (Ru)(pdf)	Not used	ARC8208	ARC8208	ARC8208	
	P69-6	Quick Start Guide	5707000007800-IL	5707000007820-IL	5707000007820-IL	5707000007820-IL	
	P69-7	Box, Gift	6007212370020-IL	6007212370140-IL	6007212370150-IL	6007212370160-IL	
	NSP	Warranty Card	ARY7172	ARY7158	ARY7158	ARY7158	
	⚠	AC Power Cord	Not used	Not used	Not used	L068250100040-IL	
		EXTERIOR SECTION (VSX-823-K)					
	⚠ P76-18	Power Trans	8200960611340-IL	8200960611350-IL	8200960611350-IL	8200960611350-IL	
D	⚠ P76-19	Cord Assy	L068125101710-IL	L068250161710-IL	L068250161710-IL	Not used	
	P76-25	Pioneer Badge	XAM3006	XAM3006	VAM1129	XAM3006	
	P76-26	Cabinet	3008212076000-IL	3008212076000-IL	3008212076010-IL	3008212076000-IL	
	P76-27	Front Panel	3067215881040-IL	3067215881140-IL	3067215881220-IL	3067215881140-IL	
	P76-28	Back Chassis	3207214576000-IL	3207214576010-IL	3207214576020-IL	3207214576100-IL	
	P76-30	Foot	4000210391000-IL	4000210391000-IL	4007210391000-IL	4000210391000-IL	
	P76-36	Stopper	4380040162010-IL	4380040162010-IL	4380040162010-IL	Not used	
	P76-39	Knob	5080212431000-IL	5080212431000-IL	5087212431100-IL	5080212431000-IL	
	P76-40	Button	5090213741100-IL	5090213741100-IL	5097213741000-IL	5090213741100-IL	
	P76-41	5 Key Button	5090214561000-IL	5090214561000-IL	5097214561100-IL	5090214561000-IL	
E	⚠	Bushing	Not used	2410040353010-IL	2410040353010-IL	2410040353010-IL	No. 57
		Socket, Power AC	Not used	Not used	Not used	G430040560021-IL	No. 58

Notes : The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".
For PCB ASSEMBLIES, Refer to "CONTRAST OF PCB ASSEMBLIES".