

9.2 EXTERIOR (1)

A

B


C

D

E

F

843CE6666NTFT0
04E-FY

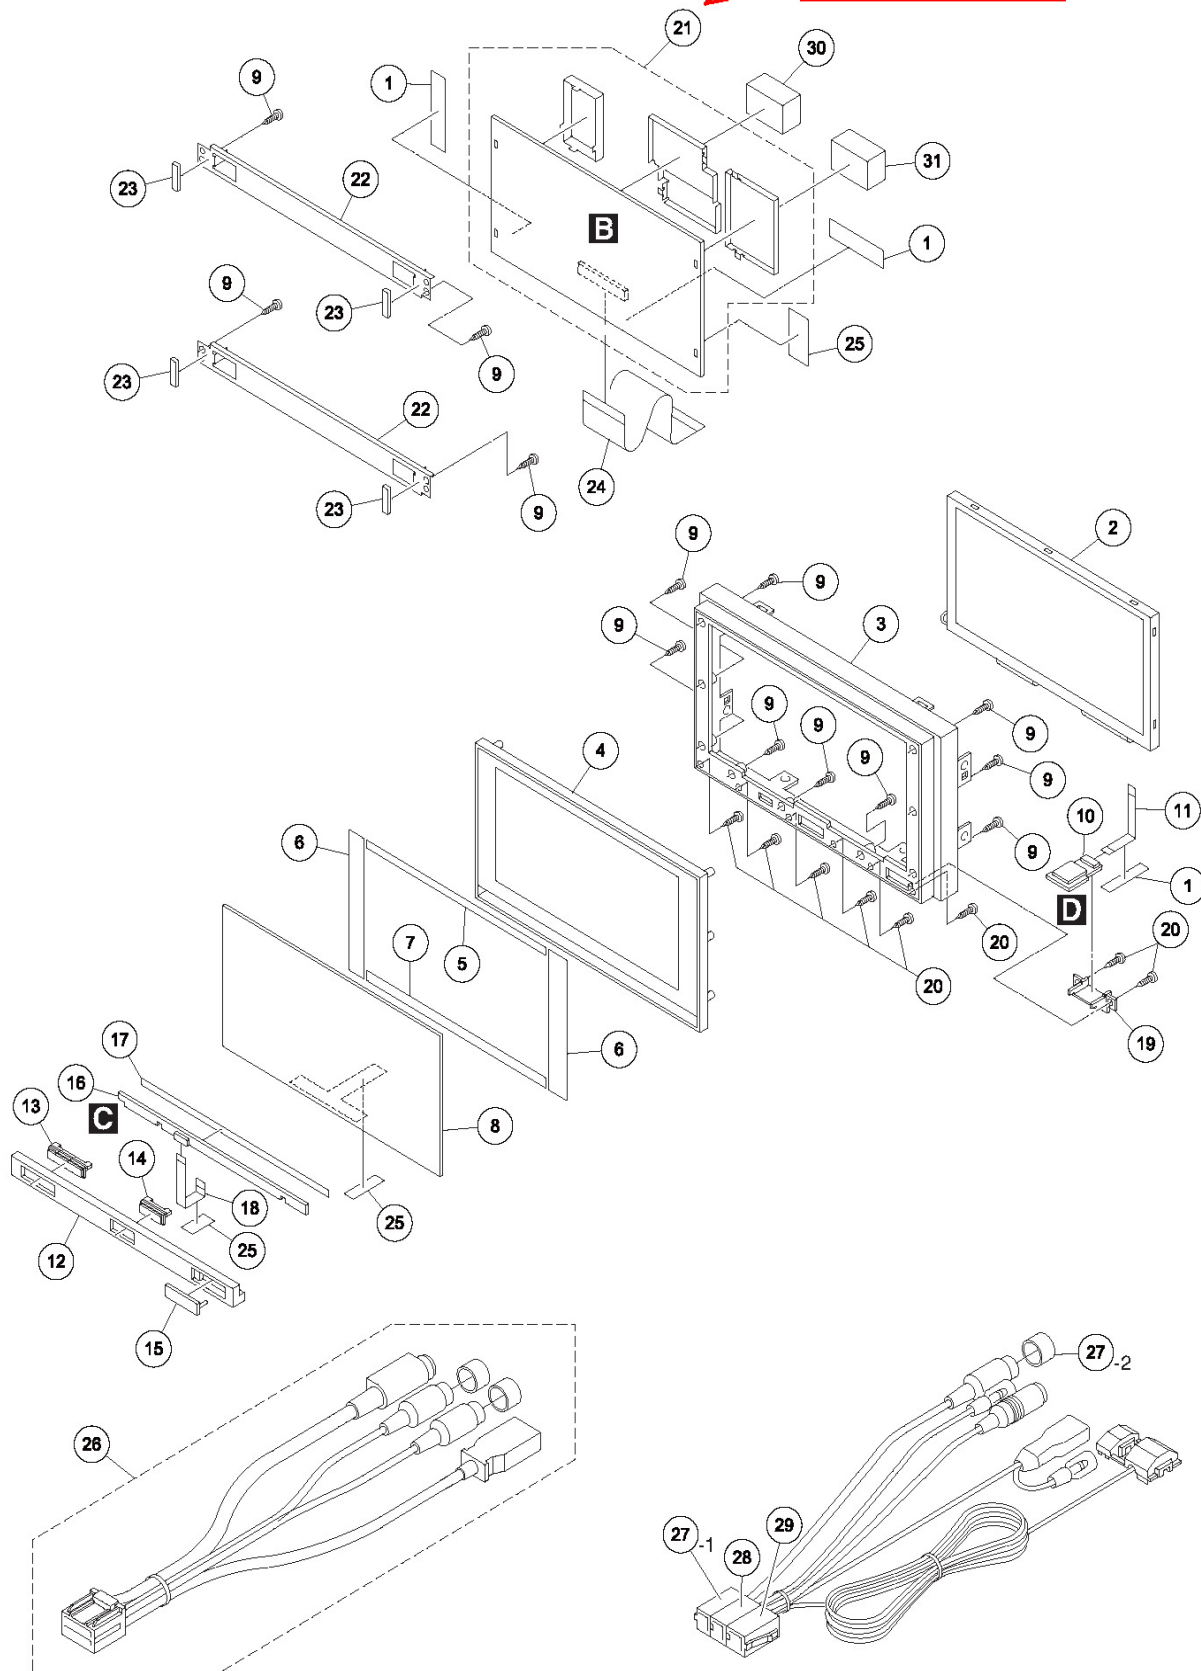

EXTERIOR (1) SECTION PARTS LIST

Mark No.	Description	Part No.	
1	Tape	121445000134-FY	A
2	LCD	143420000085-FY	
3	Panel	141210301295018-FY	
4	Panel	141270500447014-FY	
5	DS Tape	121445010235-FY	
6	DS Tape	121445000233-FY	B
7	DS Tape	121445010234-FY	
8	Touch Panel	CSX1175	
9	Screw	121045000007-FY	
10	Micro SD Unit	842CE6666NSD002-FY	
11	FFC	143820000298-FY	C
12	Grille	141210301296018-FY	
13	Button	141230303064018-FY	
14	Button	141230303065018-FY	
15	Door	141290302296018-FY	
16	KEY Unit	842CE6666NKB003-FY	D
17	Spacer	121405000217-FY	
18	FFC	143820000280-FY	
19	Holder	121240001100000-FY	
20	Screw	121103050001-FY	
21	TFT Unit(EW5)	843CE6666NTFT004E-FY	E
	TFT Unit(UC)	843CE6666NTFT004U-FY	
22	Holder	141000002767-FY	
23	Cushion	121405000208-FY	
24	FFC	143820000450-FY	
25	Tape	121445000133-FY	F
26	Cable(Output cable)	123830001253-FY	
27	Cord(Control line 1/3)	143835000637-FY	
28	Cord(Control line 2/3)	123835000786-FY	
29	Socket(Control line 3/3)	123805000215-FY	
30	Cushion	121405000082-FY	F
31	Cushion	121405000229-FY	