 


Pioneer

Service Manual



DVH-730AV/XZUW5

PROVISIONAL**CRT4714P**

DVD AV RECEIVER

DVH-730AV

 /XZUW5

DVH-735AV

 /XZRD

DVH-735AV

 /XZRI

DVH-7380AV

 /XFBR

For details, refer to "Important Check Points for Good Servicing".

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan**PIONEER ELECTRONICS (USA) INC.** P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.**PIONEER EUROPE NV** Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium**PIONEER ELECTRONICS ASIACENTRE PTE. LTD.** 253 Alexandra Road, #04-01, Singapore 159936**©PIONEER CORPORATION 2011**

K-ZZZ JULY 2011 Printed in Japan

9.2 EXTERIOR (1)

843DM7226GRKB
002-FY

A




B

C

D

E

F

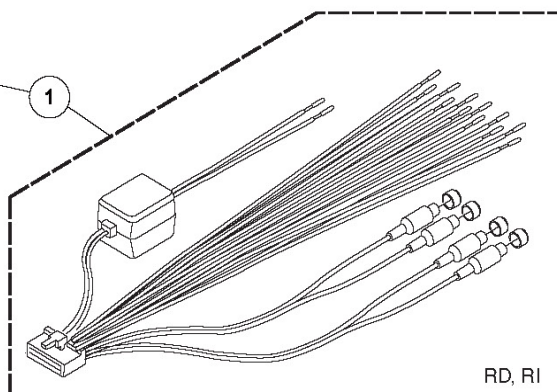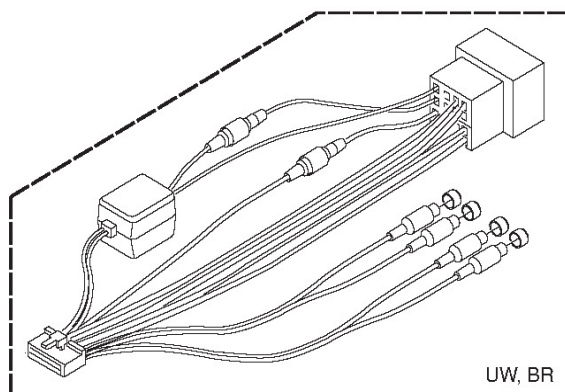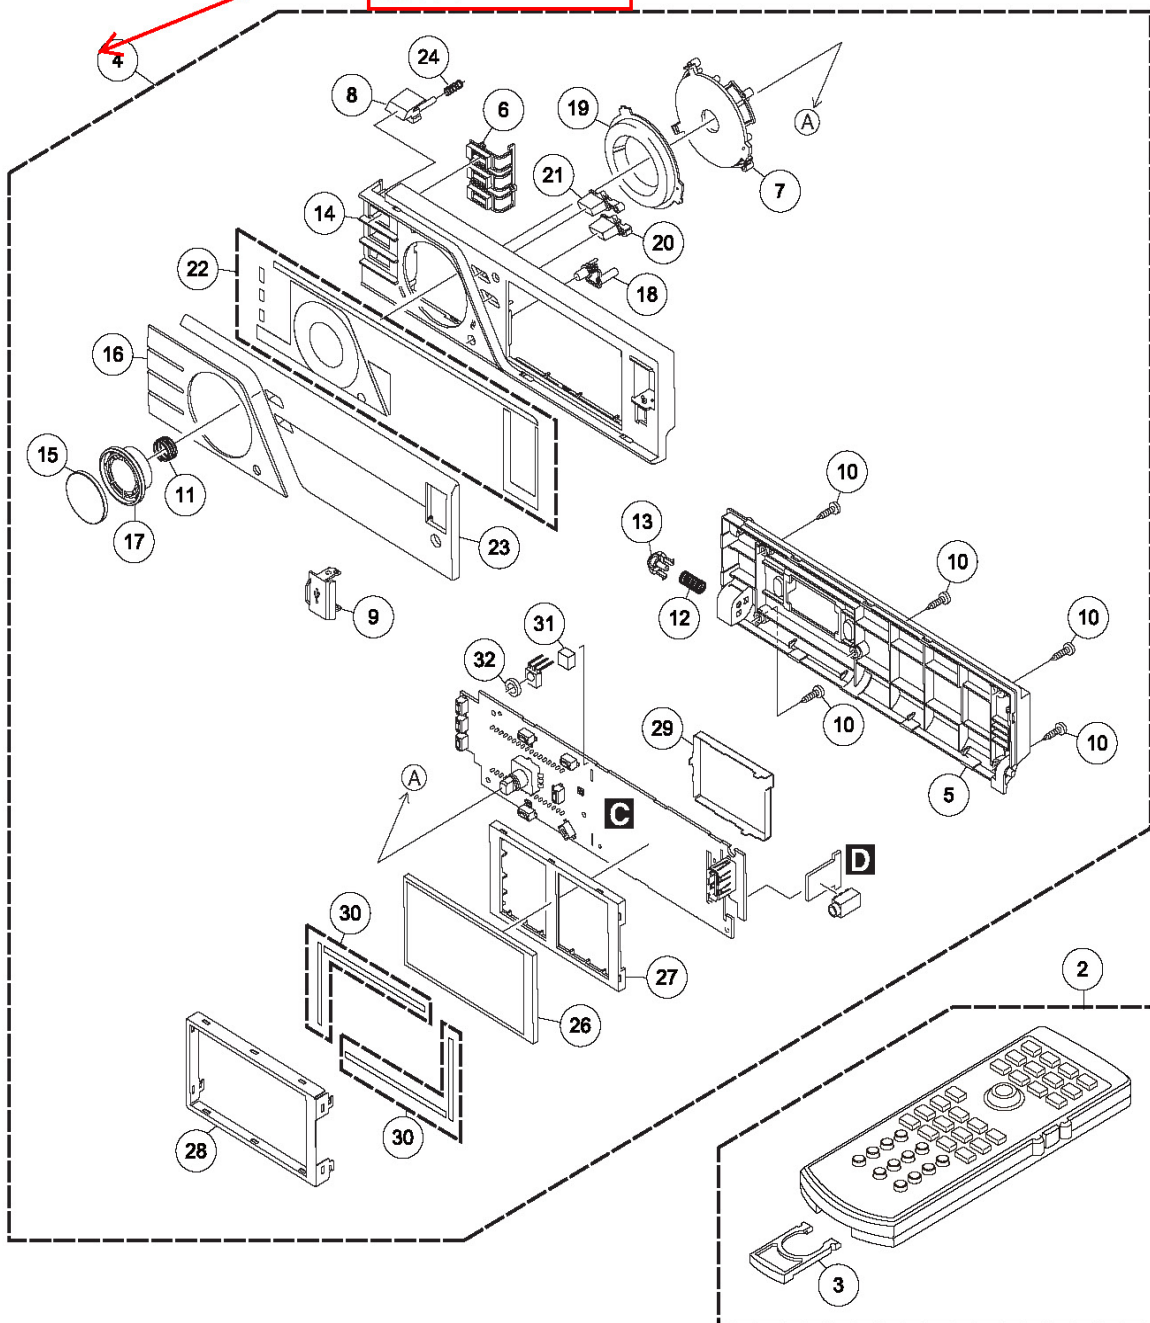

(1) EXTERIOR (1) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Power Cord (Assy)	See Contrast table (2)	17	Knob	141230502986017-FY
2	Card Type RC	See Contrast table (2)	18	Button(BSM)	141230302985018-FY
3	Battery Door (Blank)	See Contrast table (2)	19	But	141230302987018-FY
4	Detach Panel	See Contrast table (2)	20	Button(ESC)	141230302982018-FY
5	Panel	121210001272000-FY			
			21	Button(OK)	141230302984018-FY
6	Button	121240001086000-FY	22	Double Tape	121445000231-FY
7	Guide	121260000575000-FY	23	Lens	See Contrast table (2)
8	Button(DETACH)	121230002983000-FY	24	Spring	121035000015-FY
9	Cover	121290002270000-FY	25		
10	Screw	121040000120-FY			
			26	TFT/D	143420000066-FY
11	Spring	121035000569-FY	27	Holder	121240001085000-FY
12	Spring	121035000136-FY	28	Brk	141000002725-FY
13	Side Block	141290000771-FY	29	Shield	141000002728-FY
14	Panel	141210611271017-FY	30	Poron	121405000151-FY
15	Lens	141220300548018-FY			
			31	Mat	121405000230-FY
16	Lens	141220300549018-FY	32	Sponge	121405000219-FY

(2) CONTRAST TABLE

DVH-730AV/XZUW5, DVH-735AV/XZRD, DVH-735AV/XZRI, DVH-7380AV/XFBR are constructed the same except for the following:

Mark No.	Description	DVH-730AV/XZUW5	DVH-735AV/XZRD	DVH-735AV/XZRI	DVH-7380AV/XFBR
1	Power Cord (Assy)	883DM7226GBULW002-FY	Under confirmation	Under confirmation	883DM7226GBULW002-FY
2	Card Type RC	CXE4625	CXE4625	CXE4625	CXE4625
3	Battery Door (Blank)	10030-0040600-CG	10030-0040600-CG	10030-0040600-CG	10030-0040600-CG
4	Detach Panel	843DM7226GRKB002-FY	843DM7226GMKB002-FY	843DM7226GMKB002-FY	CXE4938
23	Lens	141220300550036-FY	141220300550028-FY	141220300550028-FY	141220300550018-FY