

Pioneer

Service Manual



X-HM20-K

ORDER NO.
RRV4221

CD Receiver System

X-HM20-K

X-HM20-S

X-HM10-K

X-HM10-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Serial No.	Remarks
X-HM20-K	SYXJC8	AC 220 V to 240 V	&&&&#####YY	YY: Europe
X-HM20-S	SYXJC8	AC 220 V to 240 V	&&&&#####YY	YY: Europe
X-HM10-K	SYXJC8	AC 220 V to 240 V	&&&&#####YY	YY: Europe
X-HM10-S	SYXJC8	AC 220 V to 240 V	&&&&#####YY	YY: Europe




PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2011

K-IZV SEPT. 2011 Printed in Japan

3. BASIC ITEMS FOR SERVICE

3.1 PCB LOCATIONS

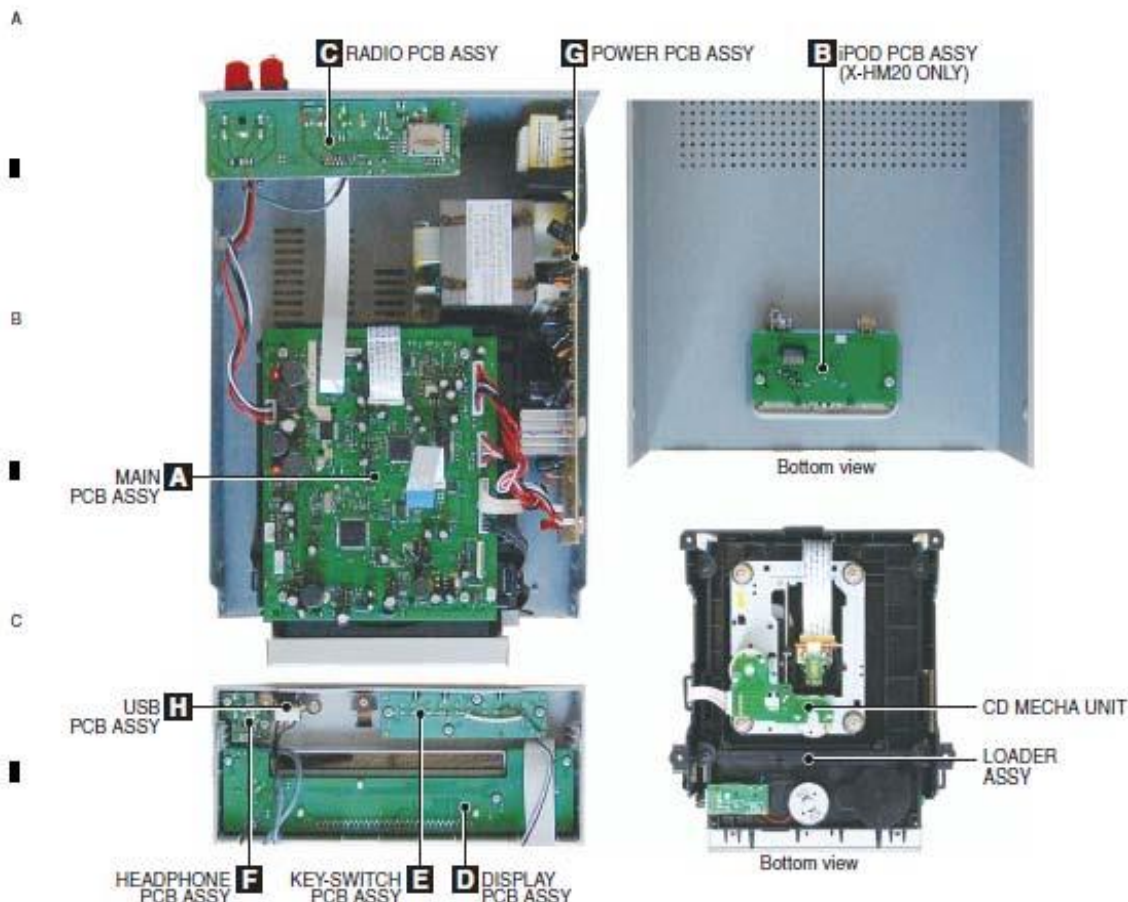

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Mark No.	Description	Part No.	Mark No.	Description	Part No.
LIST OF ASSEMBLIES					
1.	MAIN PCB ASSY (X-HM20)	92L36100201011	1.	iPOD PCB ASSY (X-HM20 ONLY)	92L36600201010
1.	MAIN PCB ASSY (X-HM10)	92L36100101011	1.	KEY-SWITCH PCB ASSY (X-HM20)	92L37200201010
1.	POWER PCB ASSY (X-HM20)	92L36800201010	1.	KEY-SWITCH PCB ASSY (X-HM10)	92L37200101011
1.	POWER PCB ASSY (X-HM10)	92L36800101010			
1.	DISPLAY PCB ASSY (X-HM20)	92L36500201010	1.	CD MECHA UNIT	92L28700220601
1.	DISPLAY PCB ASSY (X-HM10)	92L36500101010	1.	LOADER ASSY	92L5150020071T
1.	RADIO PCB ASSY (X-HM20)	92L36400201010			
1.	RADIO PCB ASSY (X-HM10)	92L36400101010			
1.	HEADPHONE PCB ASSY (X-HM20)	92L37100201011			
1.	HEADPHONE PCB ASSY (X-HM10)	92L37100101011			
1.	USB PCB ASSY (X-HM20)	92L36900201011			
1.	USB PCB ASSY (X-HM10)	92L36900101011			

X-HM20-K