 


Pioneer

Service Manual



PD-30-K

ORDER NO.
RRV4333

Super Audio CD Player

PD-30-K

PD-30-S

PD-10-K

PD-10-S

PD-10


THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PD-30-K, PD-30-S	PWSYXZT8	AC 220 V to 230 V	
PD-10-K, PD-10-S	PWSYXZT8	AC 220 V to 230 V	
PD-10	FXZT	AC 110 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2012

K-MZV JULY 2012 Printed in Japan

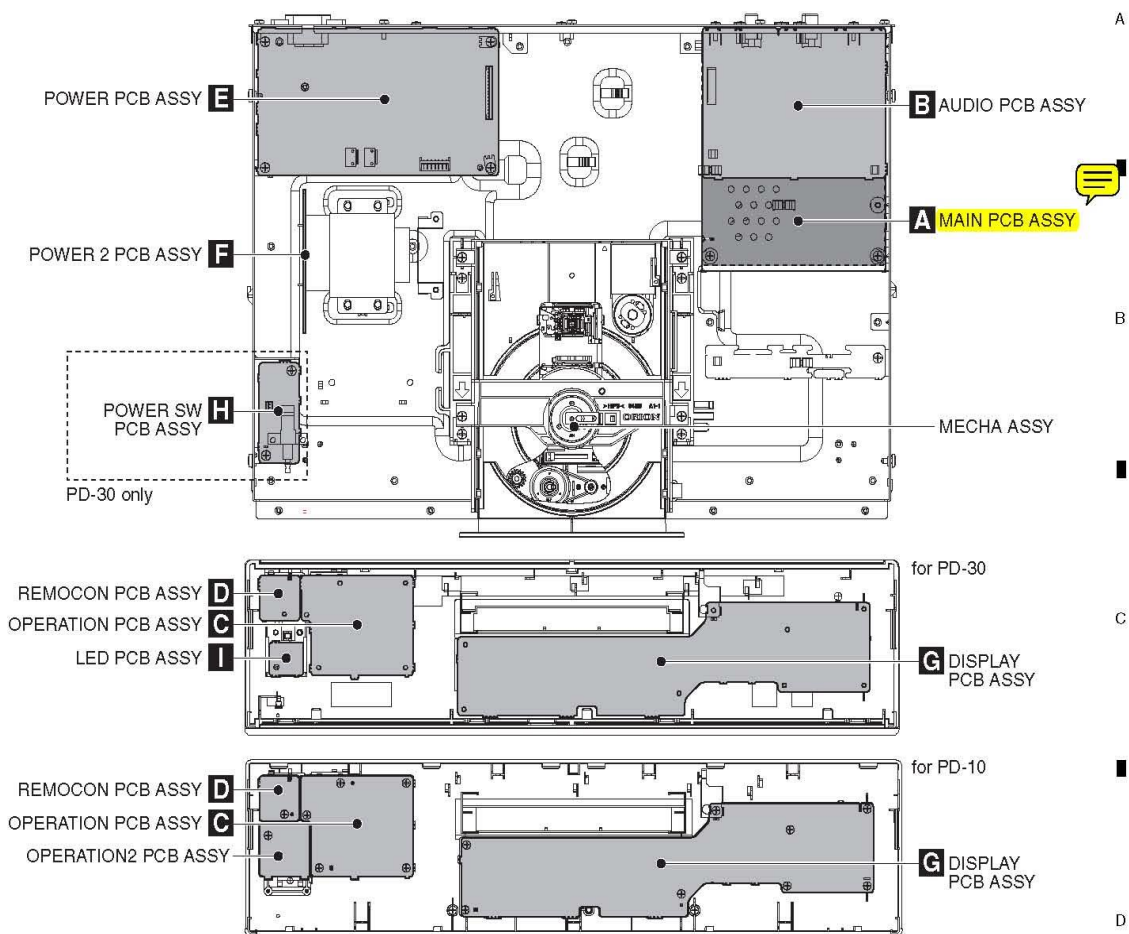

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 ● The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
 Therefore, when replacing, be sure to use parts of identical designation.

LIST OF ASSEMBLIES

Mark	Symbol and Description	PD-30-K /PWSYXZT8	PD-30-S /PWSYXZT8	PD-10-K /PWSYXZT8	PD-10-S /PWSYXZT8	PD-10 /FXZT
	1..REMOCON PCB ASSY	A11901ADA0	A11901ADA0	A11801ADA0	A11801ADA0	A11802ADA0
	1..DISPLAY PCB ASSY	A11901ADP0	A11901ADP0	A11801ADP0	A11801ADP0	A11802ADP0
	1..LED PCB ASSY	A11901ADT0	A11901ADT0	Not used	Not used	Not used
	1..POWER 2 PCB ASSY	A11901AFI0	A11901AFI0	A11801AFI0	A11801AFI0	A11802AFI0
	1..MAIN PCB ASSY	A11905AF40	A11901AF40	A11801AF40	A11801AF40	A11804AF40
	1..AUDIO PCB ASSY	A11905AF70	A11901AF70	A11801AF70	A11801AF70	A11802AF70
	1..POWER PCB ASSY	A11905A240	A11901A240	A11801A240	A11801A240	A11802A240
	1..OPERATION PCB ASSY	A11901A270	A11901A270	A11801A270	A11801A270	A11801A270
NSP	1..POWER SW PCB ASSY	A11901A320	A11901A320	Not used	Not used	Not used
	MECHA ASSY	A11902A650	A11902A650	A11902A650	A11902A650	A11902A650

