

Pioneer

Service Manual

PROVISIONAL
RRV4257P

DVD PLAYER

DV-3022V

DV-3020V

DV-3022KV

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Region No.	Serial No.	Remarks
DV-3022V	YXZT5	AC 220 V to 240 V	2	&&&&#####YY	YY: Europe
DV-3020V	YXZT5	AC 220 V to 240 V	2	&&&&#####YY	YY: Europe
DV-3022V	DXZTRB	AC 110 V to 240 V	2	&&&&#####RB	RB: Middle East, South Africa
DV-3022V	PWXZT	AC 110 V to 240 V	4	&&&&#####PP	PP: Oceania
DV-3022V	FXZT	AC 110 V to 240 V	3	&&&&#####TA	TA: Taiwan
DV-3022V	AXZT5	AC 110 V to 240 V	6	&&&&#####CN	CN: China
DV-3022KV	SXZT	AC 220 V to 240 V	5	&&&&#####UR	UR: Russia
DV-3022KV	LXZT	AC 110 V to 240 V	3	&&&&#####LL	LL: Asean
DV-3022KV	DXZTCS	AC 110 V to 240 V	4	&&&&#####CS	CS: Latin America
DV-3022KV	TXZT	AC 110 V to 240 V	3	&&&&#####TL	TL: Thailand

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
DV-2022/YXZT5	RRV4202	

For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2011

K-ZZZ SEPT. 2011 Printed in Japan

Mark	No.	Symbol and Description	DV-2022 /YXZT5	DV-3022V /DXZTRB	DV-3022V /PWXZT	DV-3022V /FXZT	DV-3022V /AXZT5	Remarks
⚠		Operating Instructions (Zhtw)	Not used	Not used	Not used	J2P02410B	Not used	A
		Operating Instructions (Zhcn)	Not used	Not used	Not used	Not used	J2P03301A	
		AC Power Cord	Not used	120A158804	120G168801	120S198902	120S1K8802	
		Audio/Video Cable	Not used	06EHBA2005	06EHBA2005	06EHBA2005	06EHBA2005	
		Sheet FP Name	Not used	Not used	Not used	723000F157	Not used	
		Sheet Remoconoverlay	Not used	Not used	Not used	723000F137	Not used	
		EXTERIOR SECTION						
⚠	P37-5	Cord Jumper	12C1091301	12C10C1304	12C10C1304	12C10C1304	12C10C1304	B
	P37-6	Cord AC Bush	120A658802	Not used	Not used	Not used	Not used	
	P37-7	Front Cabi Assy	7A708A675A	7A708A667A	7A708A667A	7A708A667A	7A708A667A	
	P37-19	Cord Jumper	12C10C1401	Not used	Not used	Not used	Not used	
	P37-20	Spring Earth	753WUAA029	Not used	Not used	Not used	Not used	
		Screw Tap Tite(p)	Not used	8110I2680U	8110I2680U	8110I2680U	8110I2680U	No. 34
		Spring Earth	Not used	Not used	Not used	744WUA0049	Not used	No. 35

Notes : The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".
For PCB ASSEMBLIES, Refer to "CONTRAST OF PCB ASSEMBLIES", "2. SCHEMATIC DIAGRAM" and "3 PCB CONNECTION DIAGRAM".

DV-3022KV/SXZT, DV-3022KV/LXZT, DV-3022KV/DXZTCS and DV-3022KV/TXZT

DV-2022/YXZT5, DV-3022KV/SXZT, DV-3022KV/LXZT and DV-3022KV/DXZTCS are constructed the same except for the following:

Mark	No.	Symbol and Description	DV-2022 /YXZT5	DV-3022KV /SXZT	DV-3022KV /LXZT	DV-3022KV /DXZTCS	DV-3022KV /TXZT	Remarks
⚠	P37-1	PCB ASSEMBLIES						C
		1..DVD MT PCB ASSY	A2P031A130	A2P114A130	A2P114A130	A2P114A130	A2P114A130	
	P37-2	1..POWER PCB ASSY	A2P024A240	A2P024A240	A2P024A240	A2P022A240	A2P022A240	
	P37-3	1..OPERATION PCB ASSY	A2P031A270	A2P117A270	A2P114A270	A2P114A270	A2P118A270	
	P37-18	1..REAR JACK PCB ASSY	A2P006A250	Not used	Not used	Not used	Not used	
		1..KARAOKE PCB ASSY	Not used	A2P024ADV0	A2P024ADV0	A2P024ADV0	A2P024ADV0	No. 31
		PACKING SECTION						
⚠	P35-1	Operating Instructions (En/It)	J2P00621A	Not used	Not used	Not used	Not used	D
	P35-3	Remote Control Unit	076E0SH051	076E0SH061	076E0SH061	076E0SH061	076E0SH061	
	P35-5	Gift Box	793WCDE616	793WCDE619	793WCDE568	793WCDE635	793WCDE618	
	P35-6	Operating Instructions (Fr/De)	J2P00622A	Not used	Not used	Not used	Not used	
	P35-7	Operating Instructions (Es/Nl)	J2P00623A	Not used	Not used	Not used	Not used	
⚠		Operating Instructions (Ru)	Not used	J2P00101A	Not used	Not used	Not used	E
		Operating Instructions (Zhtw)	Not used	Not used	J2P02410B	Not used	Not used	
		Operating Instructions (En)	Not used	Not used	J2P02401B	J2P02401B	Not used	
		Operating Instructions (Es/Ptbr)	Not used	Not used	Not used	J2P02521A	Not used	
		Operating Instructions (Th)	Not used	Not used	Not used	Not used	J2P00401A	
⚠		AC Power Cord	Not used	Not used	Not used	120Q198904	1207158803	F
		Audio/Video Cable	Not used	Not used	06EHBA2005	06EHBA2005	06EHBA2005	
		HDMI Cable	Not used	Not used	Not used	06ENYA5002	06ENYA5002	
		EXTERIOR SECTION						
	P37-5	Cord Jumper	12C1091301	12C10C1304	12C10C1304	12C10C1304	12C10C1304	
⚠	P37-6	Cord AC Bush	120A658802	120A658802	120A658802	Not used	Not used	
	P37-7	Front Cabi Assy	7A708A675A	7A708A616A	7A708A616A	7A708A616A	7A708A616A	
	P37-19	Cord Jumper	12C10C1401	Not used	Not used	Not used	Not used	
	P37-20	Spring Earth	753WUAA029	753WUAA029	Not used	Not used	Not used	
		Cord Jumper	Not used	12C1050801	12C1050801	12C1050801	12C1050801	No. 32
		Rotary Knob	Not used	731WPAA002	731WPAA002	731WPAA002	731WPAA002	No. 33
		Screw Tap Tite(p)	Not used	8110I2680U	8110I2680U	8110I2680U	8110I2680U	No. 34

Notes : The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".
For PCB ASSEMBLIES, Refer to "CONTRAST OF PCB ASSEMBLIES", "PCB PARTS LIST", "2. SCHEMATIC DIAGRAM" and "3 PCB CONNECTION DIAGRAM".

9.2 EXTERIOR SECTION

