


Pioneer

Service Manual

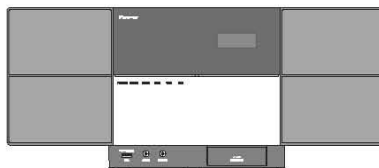

X-SMC1-K

ORDER NO.
RRV4270

Slim AV Micro System

X-SMC1-K

X-SMC1-S

X-SMC1-W

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Region No.	Serial No.	Remarks
X-SMC1-K	CUXZTSM	AC 100 V to 240 V	1	&&&&#####UC	UC : U.S., Canada
X-SMC1-K	SYXZT8	AC 100 V to 240 V	2	&&&&#####YY	YY : Europe
X-SMC1-S	SYXZT8	AC 100 V to 240 V	2	&&&&#####YY	YY : Europe
X-SMC1-S	FLXZT	AC 100 V to 240 V	3	&&&&#####LS	LS : Asia
X-SMC1-S	AXZT5	AC 100 V to 240 V	6	&&&&#####CN	CN : China
X-SMC1-W	AXZT5	AC 100 V to 240 V	6	&&&&#####CN	CN : China



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2011

K-IZV NOV. 2011 Printed in Japan

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 DISPLAY PCB Assy	See Contrast table (2)	46	2..Cushion 5*130*T1.0	800WF00130
	2 DOCK PCB Assy	See Contrast table (2)	47	2..Cushion 5*160*T1.0	800WF00131
	3 BLUETOOTH PCB Assy	See Contrast table (2)	48	1..Speaker Box R Assy	7A7610016A
	4 MAIN PCB Assy	See Contrast table (2)	49	2..Cushion 5*140*T1.0	800WF00129
	5 OPERATION PCB Assy	See Contrast table (2)	50	2..Cushion 5*130*T1.0	800WF00130
	6 TUNER PCB Assy	See Contrast table (2)	51	2..Cushion 5*160*T1.0	800WF00131
	7 DVD MT PCB Assy	See Contrast table (2)	52	Tray	See Contrast table (2)
	8 LOADER Unit	A55Z01K650	53	Cover Dock Bottom	702WPA1612
	9 Speaker	SWP1033	54	Bottom Case	See Contrast table (2)
	10 Speaker	66-226PA/XTW-14	55	Stand	704NPB0001
B	11 Cord Jumper (CD4002)	12C50S1701	56	Spring Gear	743WKA0062
	12 Cord Connect (CD8101)	06EA2A0902	57	Hook	See Contrast table (2)
	13 Cord Connect (CD652)	06EA240802	58	Frame Top	761WPA0669
	14 Wire (S801)	A2P301A139	59	Frame Bottom	761WPA0672
	15		60	Gear Main	787WPA0002
	16 Cord Connect (CD8108)	06EA242202	61	Cushion 10*15*T=1.0	800WF00113
	17 Cord Connect (CD5501)	06EH144105	62	Cushion L	800WF00132
	18 Cord Jumper (CD702)	12C14O1604	63	Cushion R	800WF00133
	19 Cord Jumper (CD2001)	12C50A0604	64	Sheet Silicone	800WR00125
	20 Cord Jumper (CD8202)	12C50B0602	65	Latch	89029K0000
C	21 Cord Jumper (CD8103)	12C50K0801	66	Damper Assy	8980G4A0C9
	22 Rubber Foot	VEB1349	67	Caution	See Contrast table (2)
	23 1..Front Cabi Assy	See Contrast table (2)	68	Sheet AC Label	See Contrast table (2)
	24 2..Felt Sheet	800WQ0A239	69		
	25 2..Felt Sheet	800WQ0A265	70		
	26 2..Felt Sheet	800WQ00194	71	Screw	See Contrast table (2)
	27 1..Front Panel Assy	See Contrast table (2)	72	Screw Tap Tite (B) BI	8109230A0S
	28 2..Front Panel	See Contrast table (2)	73	Screw Tap Tite (B) BI	8109230A0U
	29 2..Felt	800WQ00223	74	Screw, Tap Tite (P)	8110E2680U
	30 1..Rear Cabi Assy	See Contrast table (2)	75	Screw Tap Tite (P)	8110I2680U
D	31 2..Cover BT Adapter	See Contrast table (2)	76	Screw, Tap Tite (P) BI	811022080U
	32 2..Top Panel	See Contrast table (2)	77	Screw, Tap Tite (P)	811022680U
	33 2..Felt Sheet	800WQ00196	78	Screw Tap Tite (P) BRA	8110630A0U
	34 1..Cover Dock Top Assy	See Contrast table (2)			
	35 2..Felt-Sheet	800WQ0A240			
	36 Grill Frame L Assy	See Contrast table (2)			
	37 Grill Frame R Assy	See Contrast table (2)			
	38 1..Button Frame Assy	See Contrast table (2)			
	39 2..Button Frame	See Contrast table (2)			
	40 2..Felt Sheet	800WQ0A233			
E	41 2..Felt Sheet	800WQ00203			
	42 1..Holder DVD Assy	7A761A034A			
	43 2..Insulator	92P200030A			
	44 1..Speaker Box L Assy	7A7610015A			
	45 2..Cushion 5*140*T1.0	800WF00129			

(2) CONTRAST TABLE

X-SMC1-K/CUXZTSM, SYXZT8, X-SMC1-S/SYXZT8, FLXZT, AXZT5 and X-SMC1-W/AXZT5 are constructed the same except for the following:

Mark	No.	Symbol and Description	X-SMC1-K/ CUXZTSM	X-SMC1-K/ SYXZT8	X-SMC1-S/ SYXZT8	X-SMC1-S/ FLXZT	X-SMC1-S/ AXZT5	X-SMC1-W/ AXZT5	A
	1	DISPLAY PCB Assy	A2P302ADP0	A2P306ADP0	A2P301ADP0	A2P304ADP0	A2P307ADP0	A2P303ADP0	A
	2	DOCK PCB Assy	A2P302AFF0	A2P306AFF0	A2P301AFF0	A2P304AFF0	A2P307AFF0	A2P303AFF0	
	3	BLUETOOTH PCB Assy	A2P302AFG0	A2P306AFG0	A2P301AFG0	A2P304AFG0	A2P307AFG0	A2P303AFG0	
	4	MAIN PCB Assy	A2P302AF40	A2P306AF40	A2P301AF40	A2P304AF40	A2P307AF40	A2P303AF40	
	5	OPERATION PCB Assy	A2P302A270	A2P306A270	A2P301A270	A2P304A270	A2P307A270	A2P303A270	
	6	TUNER PCB Assy	A2P302A290	A2P306A290	A2P301A290	A2P304A290	A2P307A290	A2P303A290	B
	7	DVD MT PCB Assy	A2P302A130	A2P306A130	A2P301A130	A2P304A130	A2P307A130	A2P303A130	
	23	Front Cabi Assy	7A701B393A	7A701B393A	7A701B393A	7A701B393A	7A701B393A	7A701B404A	
	27	Front Panel Assy	7A701B414A	7A701B414A	7A701B407A	7A701B407A	7A701B407A	7A701B423A	
	28	Front Panel	701WPJD897	701WPJD897	701WPJD892	701WPJD892	701WPJD892	701WPJD912	
	30	Rear Cabi Assy	7A702B484A	7A702B484A	7A702B484A	7A702B484A	7A702B484A	7A702B483A	C
	31	Cover BT Adapter	702WPB0140	702WPB0140	702WPB0140	702WPB0140	702WPB0140	702WPBA296	
	32	Top Panel	711WPD0808	711WPD0808	711WPD0808	711WPD0808	711WPD0808	711WPD0808	
	34	Cover Dock Top Assy	7A7020398A	7A7020398A	7A7020398A	7A7020398A	7A7020398A	7A702B501A	
	36	Grille Frame L Assy	7A7140001A	7A7140001A	7A7140001A	7A7140001A	7A7140001A	7A714A001A	
	37	Grille Frame R Assy	7A7140002A	7A7140002A	7A7140002A	7A7140002A	7A7140002A	7A714A002A	D
	38	Button Frame Assy	7A735A064A	7A735A064A	7A735A064A	7A735A064A	7A735A064A	7A735A066A	
	39	Button Frame	735WPJA873	735WPJA873	735WPJA873	735WPJA873	735WPJA873	735WPJA875	
	52	Tray	701WPJ1586	701WPJ1586	701WPJ1586	701WPJ1586	701WPJ1586	701WPJD900	
	54	Bottom Case	702WPJ0072	702WPJ0072	702WPJ0072	702WPJ0072	702WPJ0072	702WPJA033	
	57	Hook	761WPAA317	761WPAA317	761WPAA317	761WPAA317	761WPAA317	761WPAA316	E
	67	Caution	J2P30129A	J2P30129A	J2P30129A	J2P30129A	J2P30329A	J2P30329A	
	68	Sheet AC Label	Not used	Not used	Not used	Not used	723000F400	723000F392	
	71	Screw	810213060S	810213060S	810213060S	810213060S	810213060S	810223060U	

1 ■ 2 ■ 3 ■ 4 ■

