


Pioneer

Service Manual

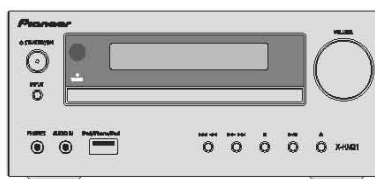

X-HM21-K

 ORDER NO.
RRV4394
CD RECEIVER SYSTEM

X-HM21-K

 /SYXE8

X-HM21-S

 /SYXE8

X-HM11-K, -S

 /SYXE8

X-HM11-K

 /VXE8

X-HM21DAB-K

 /VXE8

X-HM11DAB-K

 /VXE8

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Serial No.	Remarks
X-HM21-K	SYXE8	AC 220 V to 240 V	&&&&#####YY	YY:Europe
X-HM21-S	SYXE8	AC 220 V to 240 V	&&&&#####YY	YY:Europe
X-HM11-K	SYXE8	AC 220 V to 240 V	&&&&#####YY	YY:Europe
X-HM11-K	VXE8	AC 220 V to 240 V	&&&&#####GB	GB:U.K
X-HM11-S	SYXE8	AC 220 V to 240 V	&&&&#####YY	YY:Europe
X-HM21DAB-K	VXE8	AC 220 V to 240 V	&&&&#####GB	GB:U.K
X-HM11DAB-K	VXE8	AC 220 V to 240 V	&&&&#####GB	GB:U.K


PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium


PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2013

K-FZV MAR. 2013 Printed in Japan

1 2 3 4

3.2 PCB LOCATIONS

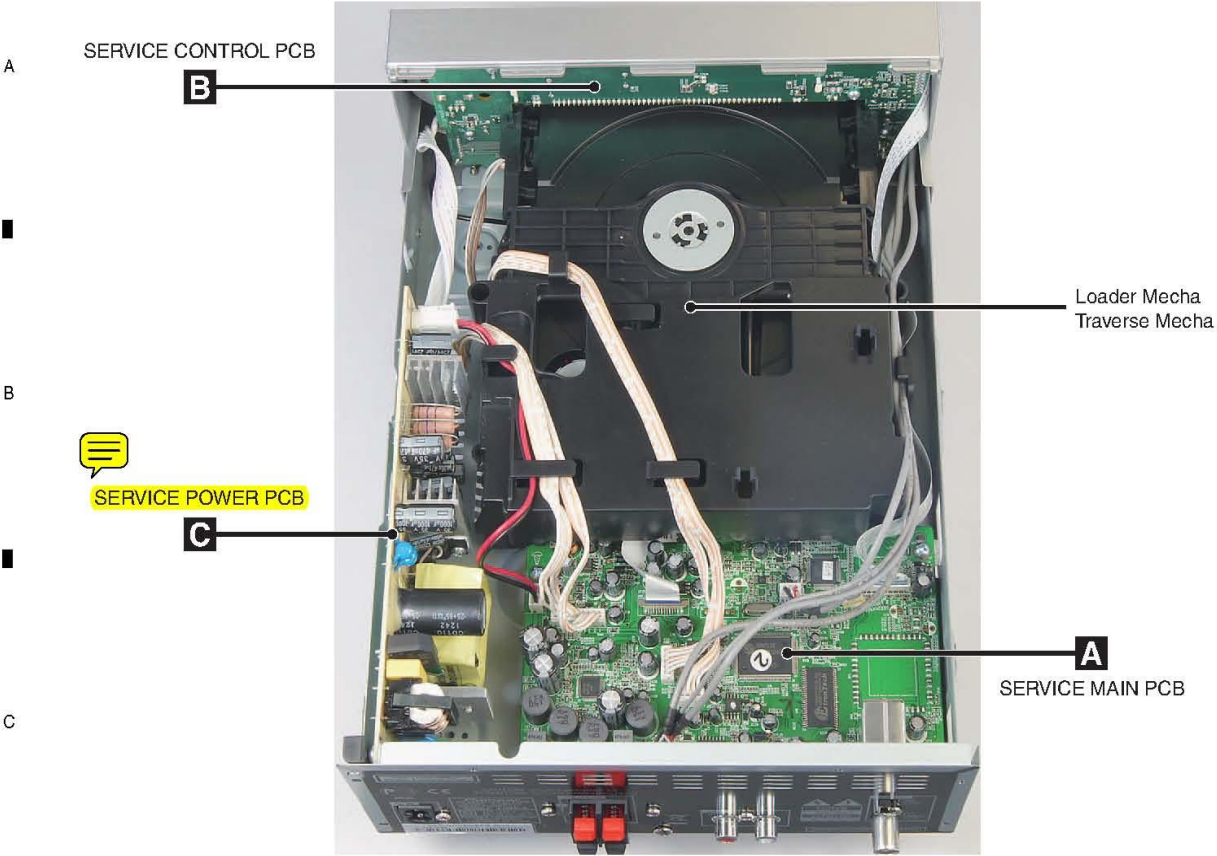

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
Therefore, when replacing, be sure to use parts of identical designation.

D

Mark	No.	Description	Part No.
<u>LIST OF ASSEMBLIES</u>			
	1..	SERVICE MAIN PCB (X-HM21)	ABE20586A-0002
	1..	SERVICE MAIN PCB (X-HM11)	ABE205710-0004
	1..	SERVICE MAIN PCB (X-HM21DAB)	ABE20586A-0001
	1..	SERVICE MAIN PCB (X-HM11DAB)	ABE205710-0003
	1..	SERVICE CONTROL PCB (X-HM21/X-HM21DAB)	ABE205690-0001
	1..	SERVICE CONTROL PCB (X-HM11/X-HM11DAB)	ABE205690-0002
	1..	SERVICE POWER PCB (X-HM21/X-HM21DAB)	ABE205720-0001
	1..	SERVICE POWER PCB (X-HM11/X-HM11DAB)	ABE205720-0002
	1..	Loader Mecha	WMA200001-0001
	1..	Traverse Mecha 7GE	WVD500008-0002

E

F