

# Pioneer

## Service Manual

ORDER NO.  
**RRV4455**

AV RECEIVER

# SC-LX87-K

# SC-LX87-S

# SC-LX77-K

# SC-LX77-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Model     | Type  | Power Requirement | Remarks |
|-----------|-------|-------------------|---------|
| SC-LX87-K | SYXJ8 | AC 220 V to 230 V |         |
| SC-LX87-S | SYXJ8 | AC 220 V to 230 V |         |
| SC-LX77-K | SYXJ8 | AC 220 V to 230 V |         |
| SC-LX77-S | SYXJ8 | AC 220 V to 230 V |         |

This service manual should be used together with the following manual(s).

| Model No.    | Order No. | Remarks                                                   |
|--------------|-----------|-----------------------------------------------------------|
| SC-79/CUXJ   | RRV4451   |                                                           |
| SC-79, SC-77 | RRV4463   | SCHEMATIC DIAGRAM, PCB CONNECTION DIAGRAM, PCB PARTS LIST |

For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan  
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.  
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium  
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936  
©PIONEER CORPORATION 2013

K-ZZZ AUG. 2013 Printed in Japan

## 9.3 REAR SECTION

