

Service Manual

ORDER NO.
RRV4562

AV RECEIVER

SC-LX88-K

SC-LX88-S

SC-LX78-K, -S

SC-LX88, SC-LX78

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	The voltage can be converted by the following method.
SC-LX88-K	SYXJ8	AC 220 V to 230 V	-----
SC-LX88-S	SYXJ8	AC 220 V to 230 V	-----
SC-LX78-K	SYXJ8	AC 220 V to 230 V	-----
SC-LX78-S	SYXJ8	AC 220 V to 230 V	-----
SC-LX88	FXJ	AC 110 V	-----
SC-LX88	DLXJ	AC 220 V to 230 V/ 240 V	With the voltage selector
SC-LX88	AXJ5	AC 220 V	-----
SC-LX78	FXJ	AC 110 V	-----
SC-LX78	DLXJ	AC 220 V to 230 V/ 240 V	With the voltage selector
SC-LX78	AXJ5	AC 220 V	-----

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
SC-89/CUXJ	RRV4550	
SC-89, SC-87, SC-LX88, SC-LX78	RRV4551	SCHEMATIC DIAGRAM, PCB CONNECTION DIAGRAM, PCB PARTS LIST

For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2014

K-ZZZ SEPT. 2014 Printed in Japan

9.3 REAR SECTION

