


Pioneer

Service Manual

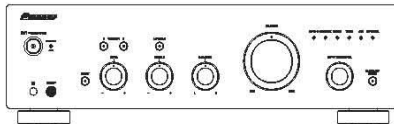

A-30-K

ORDER NO.
RRV4297

INTEGRATED AMPLIFIER

A-30-K

A-30-S

A-20-K

A-20-S

A-20

A-10-K

A-10-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
A-30-K/-S	PWSYXE8	AC 220 V to 230 V	
A-20-K/-S	PWSYXE8	AC 220 V to 230 V	
A-20	CUXE	AC 120 V	
A-10-K/-S	SYXE8	AC 220 V to 230 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 ©PIONEER CORPORATION 2012

K-FZV MAY 2012 Printed in Japan

(1) EXTERIOR SECTION (A-30/A-20) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN ASSY	See Contrast table (2)	36	Heat Sink Bracket	CMD1A800
2	FRONT ASSY	See Contrast table (2)	37	Trans Bracket	CMD1A801
3	MASTER VOLUME ASSY	See Contrast table (2)	38	AC Power Cord (CU)	See Contrast table (2)
4	TONE ASSY	AZW7477	39	Screw	BBZ30P060FTB
5	HEADPHONE ASSY	AZW7479	40	Special Screw	CHD3A012R
6	SECOUND POWER SW ASSY	AZW7478	41	Screw	See Contrast table (2)
7	Power Knob	See Contrast table (2)	42	Screw	CTB3+8JR
8	Function Knob	See Contrast table (2)	43	Screw	BBZ30P100FTB
9	Balance Knob	See Contrast table (2)	44	Screw	See Contrast table (2)
10	Volume Knob	See Contrast table (2)	45	AC Cord Bushing	See Contrast table (2)
11	Input Knob	See Contrast table (2)	46	Screw	See Contrast table (2)
12	IR Window	See Contrast table (2)	47	Screw	CTW3+6JR
13	Power Indicator	CGL1A296	48	EOL Item Screw	CTW3+8JR
14	Standby Indicator	CGL1A297	49	Screw	CTW3+12JR
15	Funkcion Indicator	CGL1A298	50	Trans Screw	CHDR1A023R
16	Sub Panel	See Contrast table (2)	51	Screw	BSZ30P060FTB
17	PCB Holder	CHE170	52	Screw	See Contrast table (2)
18	Foot Cushion	CHG1A528	53	Special Screw	CHD4A012R
19	Top Cushion	CHG1A530	54	Screw	CTB3+6JR
20	Main Cushion	CHG1A531	55	17P FFC Cable	CWC4F4A17B150B10
21	PEF Cushion	CHG1A532	56	Fuse (250V)	See Contrast table (2)
22	Wire Clamper	CHK1A009	57	Ground Washer	CNW1A035
23	Clamper	CHR301	58		
NSP 24	Serial Label S	VRW2017	59		
25	Cover Sheet	CHS1A154	60		
26	AC Inlet	See Contrast table (2)	61		
27	Top Cabinet	See Contrast table (2)	62	Power TR	CVT2SD2390P43M
28	Rear Panel	See Contrast table (2)	63	Power TR	CVT2SB1560P43M
29	Insulator	See Contrast table (2)	64	Bias TR	HVTKTC3114A
30	AL Panel	See Contrast table (2)	65	Posistor ASSY	CRTDHTS100070W2
31	Power Transformer	See Contrast table (2)	66	Acetate Tape (5 x 25)	CHS1A218
32	Ground Terminal	CMA1A006	67	Acetate Tape (10 x 15)	CHS1A217
33	Speaker Sheet	CMZ1A139Z	68	Double Side Tape	C4FA051
34	Pioneer Badge (AL)	See Contrast table (2)	69	Knob Spring	CUS2A169
35	AC Inlet Wire (SY)	See Contrast table (2)	70	Hemelon Tape	CHS1A032

9.2 EXTERIOR SECTION (A-30/A-20)

